


REMOVAL

1. REMOVE STEERING WHEEL PAD

NOTICE:

If the airbag connector is disconnected with the ignition switch at ON or ACC, DTCs will be recorded.

- (a) Place the front wheels facing straight ahead.
- (b) Remove the No. 2 and No. 3 steering wheel lower covers.
- (c) Using a torx socket wrench, loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.

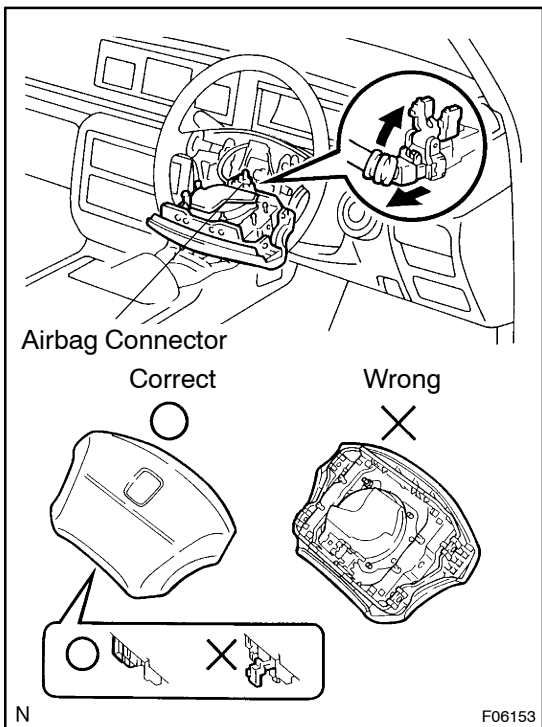


- (d) Pull out the wheel pad from the steering wheel and disconnect the airbag connector.

CAUTION:

- When storing the wheel pad, keep the upper surface of the pad facing upward.
- Never disassemble the wheel pad.

NOTICE:

When removing the wheel pad, take care not to pull the airbag wire harness.

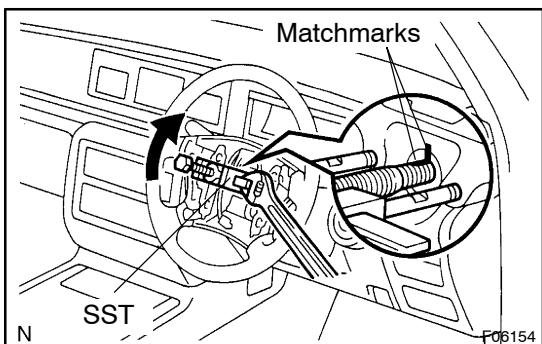

2. REMOVE STEERING WHEEL

- (a) Disconnect the connector.
- (b) Remove the steering wheel set nut.
- (c) Place matchmarks on the steering wheel and main shaft assembly.
- (d) Using SST, remove the wheel.

SST 09950-50012 (09951-05010, 09952-05010, 09953-05020, 09954-05020)

3. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER

- (a) Remove the 2 screws and No. 1 instrument panel under cover.
- (b) Disconnect the connectors.

4. REMOVE NO. 1 INSTRUMENT PANEL SAFETY PAD

- (a) Remove the 2 screws and hook/lock/release lever.
- (b) RHD:
Remove the 3 screws and No. 1 instrument panel safety pad.
- (c) LHD:
Remove the 3 bolts and No. 1 instrument panel safety pad.
- (d) Disconnect the connectors.

5. REMOVE COLUMN UPPER AND LOWER COVERS


- (a) Remove the 3 screws and column lower cover.
- (b) Remove the column upper cover.

6. REMOVE COMBINATION SWITCH WITH SPIRAL CABLE

- (a) Disconnect the connectors.
- (b) Disconnect the airbag connector.
- (c) Remove the 3 screws and combination switch.

7. REMOVE SPIRAL CABLE (See page BE-23)**NOTICE:**

Do not disassemble the cable or apply oil to it.

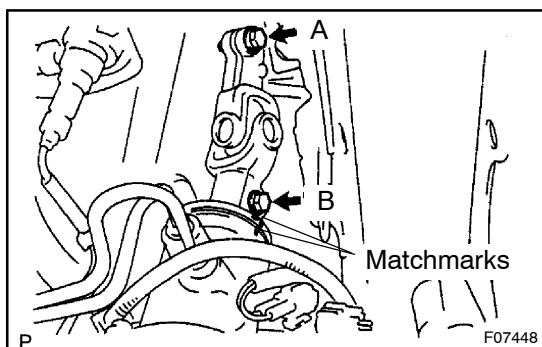**8. DISCONNECT SLIDING YOKE**


- (a) Place matchmarks on the sliding yoke and control valve shaft.
- (b) Loosen the bolt A and remove the bolt B, and disconnect the sliding yoke.

9. LHD:**REMOVE INSTRUMENT PANEL (See page BO-96)****10. REMOVE STEERING COLUMN ASSEMBLY**

- (a) Disconnect the connectors.
- (b) Remove the 4 nuts and steering column assembly.

11. REMOVE SLIDING YOKE AND NO. 2 COLUMN HOLE COVER SUB-ASSEMBLY

Remove the bolt A, sliding yoke and No. 2 column hole cover sub-assembly.

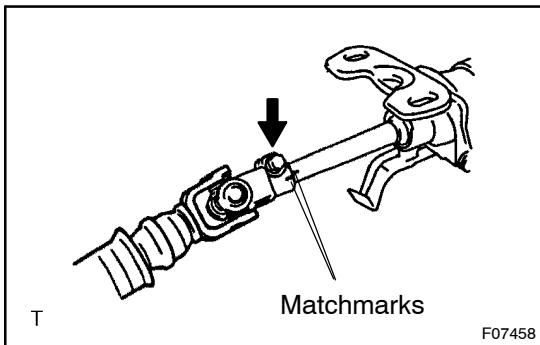

- 12. REMOVE NO. 2 INTERMEDIATE SHAFT ASSEMBLY**
- (a) Place matchmarks on the No. 2 intermediate shaft assembly and main shaft.
 - (b) Remove the bolt and No. 2 intermediate shaft assembly.