

PROBLEM SYMPTOMS TABLE**POWER WINDOW CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Power window does not operate.	1. Power window switch circuit 2. Power window motor circuit 3. Passenger door ECU	DI-601 DI-603 IN-30
Auto up (or down) function does not operate.	1. Power window switch circuit 2. Passenger door ECU	DI-601 IN-30
Jam protection function and auto up (or down) function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Passenger door ECU	DI-605 DI-607 IN-30

INTERIOR LIGHT SYSTEM:

Symptom	Suspect Area	See page
The interior light does not come on when the passenger's door is opened.	1. Passenger door courtesy switch circuit 2. Interior light system	DI-598 IN-30
The interior light does not fade out immediately when all the doors are locked within 15 seconds after they are closed.	1. Door unlock detection switch circuit 2. Interior light system	DI-593 IN-30

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Only one side door lock control does not operate.	1. Door lock motor circuit 2. Power door lock control system	DI-591 IN-30
Door key related function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Power door lock control system	DI-595 DI-593 IN-30
Key confinement prevention function does not operate.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Power door lock control system	DI-598 DI-593 IN-30

WIRELESS DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Lock or unlock function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Wireless door lock control system	DI-595 DI-593 IN-30
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system.	1. Door courtesy switch circuit 2. Wireless door lock control system	DI-598 IN-30

OTHERS:

Symptom	Suspect Area	See page
Parts of the door does not function.	1. Power source circuit 2. Passenger door ECU	DI-585 IN-30