



REMOVAL

REMOVE DRIVE BELT

- (a) Remove the air cleaner inlet No. 1.
- (b) Loosen the drive belt tension by turning the drive belt tensioner clockwise, and remove the drive belt.