


Ignition switch power source circuit

CIRCUIT DESCRIPTION

When the ignition switch is turned to the ON position, battery voltage is applied to the terminal IG of the ECU.

WIRING DIAGRAM

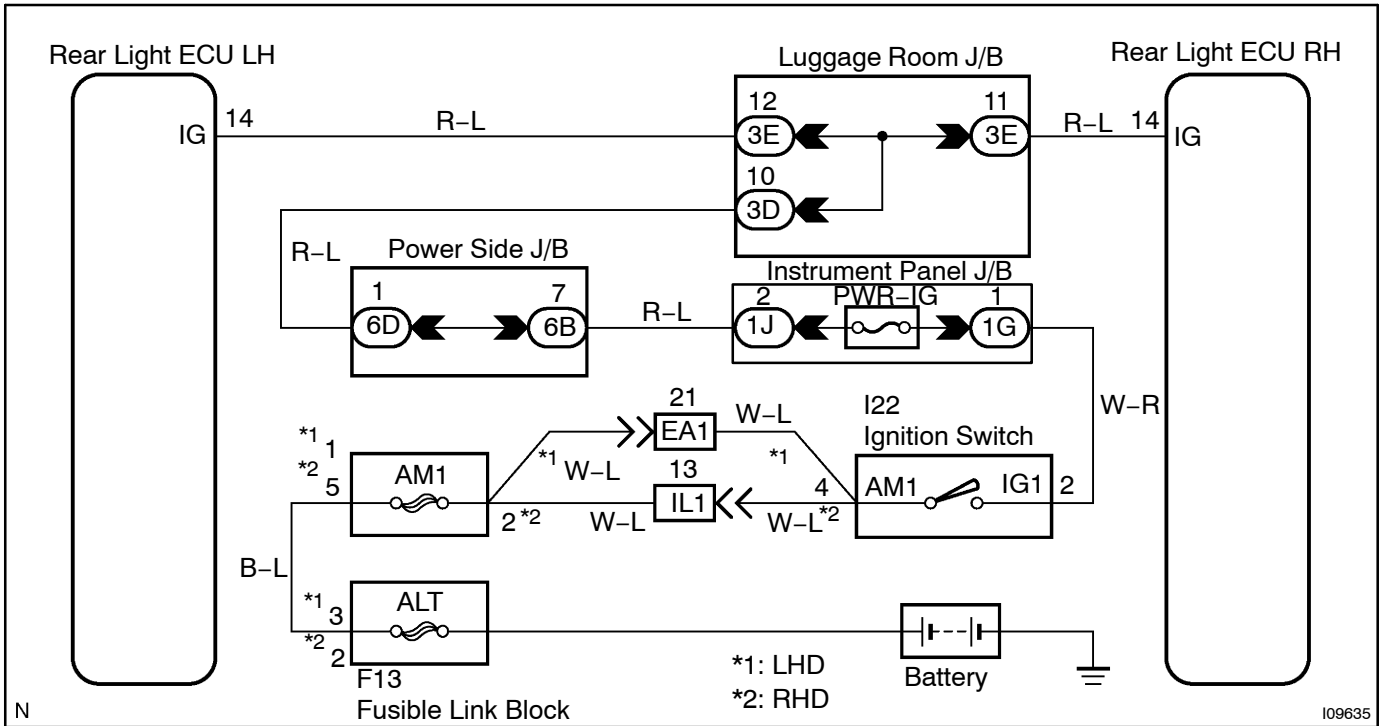

INSPECTION PROCEDURE

1 Check PWR-IG fuse.

CHECK:

Check continuity of PWR-IG fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals IG and GND of rear light ECU connector.

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG and GND.

OK:

Voltage: 10 - 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-693).

NG

3 Check wireharness and connector between ECU and body ground (See page IN-30).

NG

Repair or replace wireharness or connector

OK

Check and repair wireharness and connector between ECU and battery (See page IN-30).