


## AMBIENT TEMPERATURE SENSOR INSPECTION

AC24R-01

### 1. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Disconnect the connector.
- (b) Pull out the sensor.

### 2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT [\(See page DI-786\)](#)

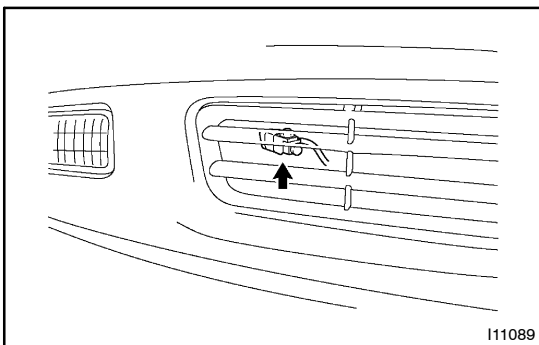

### 3. INSTALL AMBIENT TEMPERATURE SENSOR

- (a) Install the sensor.
- (b) Connect the connector.