


# G ELECTRICAL WIRING ROUTING

## Position of Parts in Instrument Panel

[RHD]

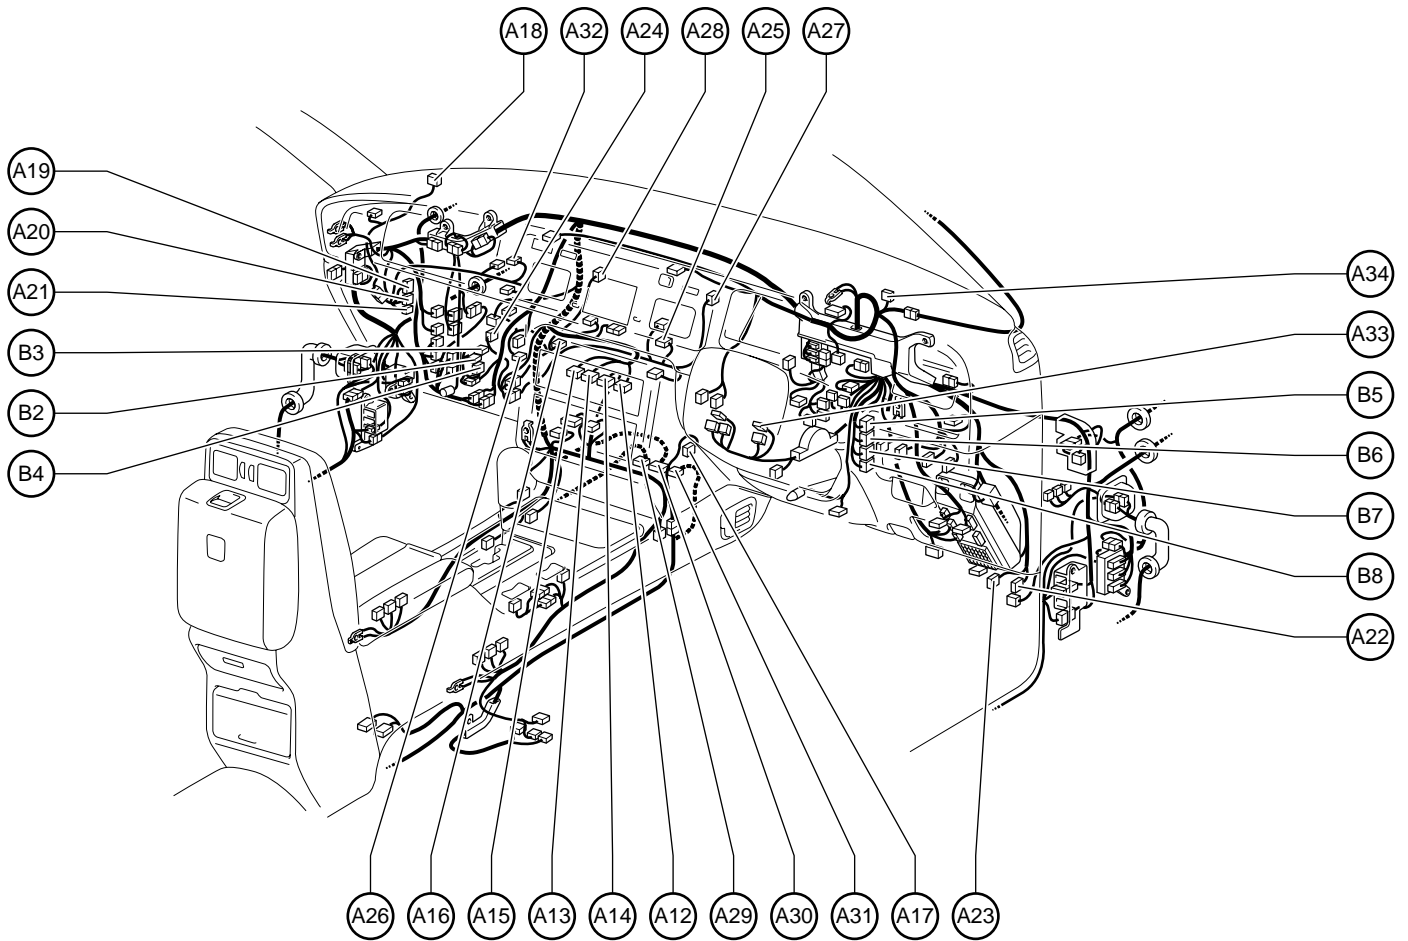

- A 12 A/CControlAssembly
- A 13 A/CControlAssembly
- A 14 A/CControlAssembly
- A 15 A/CControlAssembly
- A 16 A/CEvaporatorTemp.Sensor
- A 17 A/CRoomTemp.Sensor
- A 18 A/CSolarSensor
- A 19 ABSandTractionECU
- A 20 ABSandTractionECU
- A 21 ABSandTractionECU
- A 22 AccelPositionSensor
- A 23 AcceleratorPedalSW
- A 24 AirInletControlServoMotor
- A 25 AirMixControlServoMotor(DriverSide)
- A 26 AirMixControlServoMotor(FrontPassengerSide)
- A 27 AirVentModeControlServoMotor(DriverSide)
- A 28 AirVentModeControlServoMotor(FrontPassengerSide)

- A 29 AirbagSensorAssembly
- A 30 AirbagSensorAssembly
- A 31 AirbagSensorAssembly
- A 32 AirbagSquib(FrontPassenger'sAirbagAssembly)
- A 33 AirbagSquib(SteeringWheelPad)
- A 34 AutomaticLightControlSensor
  
- B 2 BlowerController
- B 3 BlowerController
- B 4 BlowerMotor
- B 5 BodyECU
- B 6 BodyECU
- B 7 BodyECU
- B 8 BodyECU