

DTC	P1335/13	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	-----------------	---

CIRCUIT DESCRIPTION

Refer to Crankshaft Position Sensor Circuit Malfunction on [page DI-73](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	No crankshaft position sensor signal to engine ECU with engine speed 1,000 rpm or more	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Signal plate • Engine ECU

WIRING DIAGRAM

Refer to Crankshaft Position Sensor Circuit Malfunction on [page DI-73](#) for the WIRING DIAGRAM.

INSPECTION PROCEDURE

HINT:

Refer to Crankshaft Position Sensor Circuit Malfunction on [page DI-73](#).