


Power Seat Limit Switch Circuit

WIRING DIAGRAM

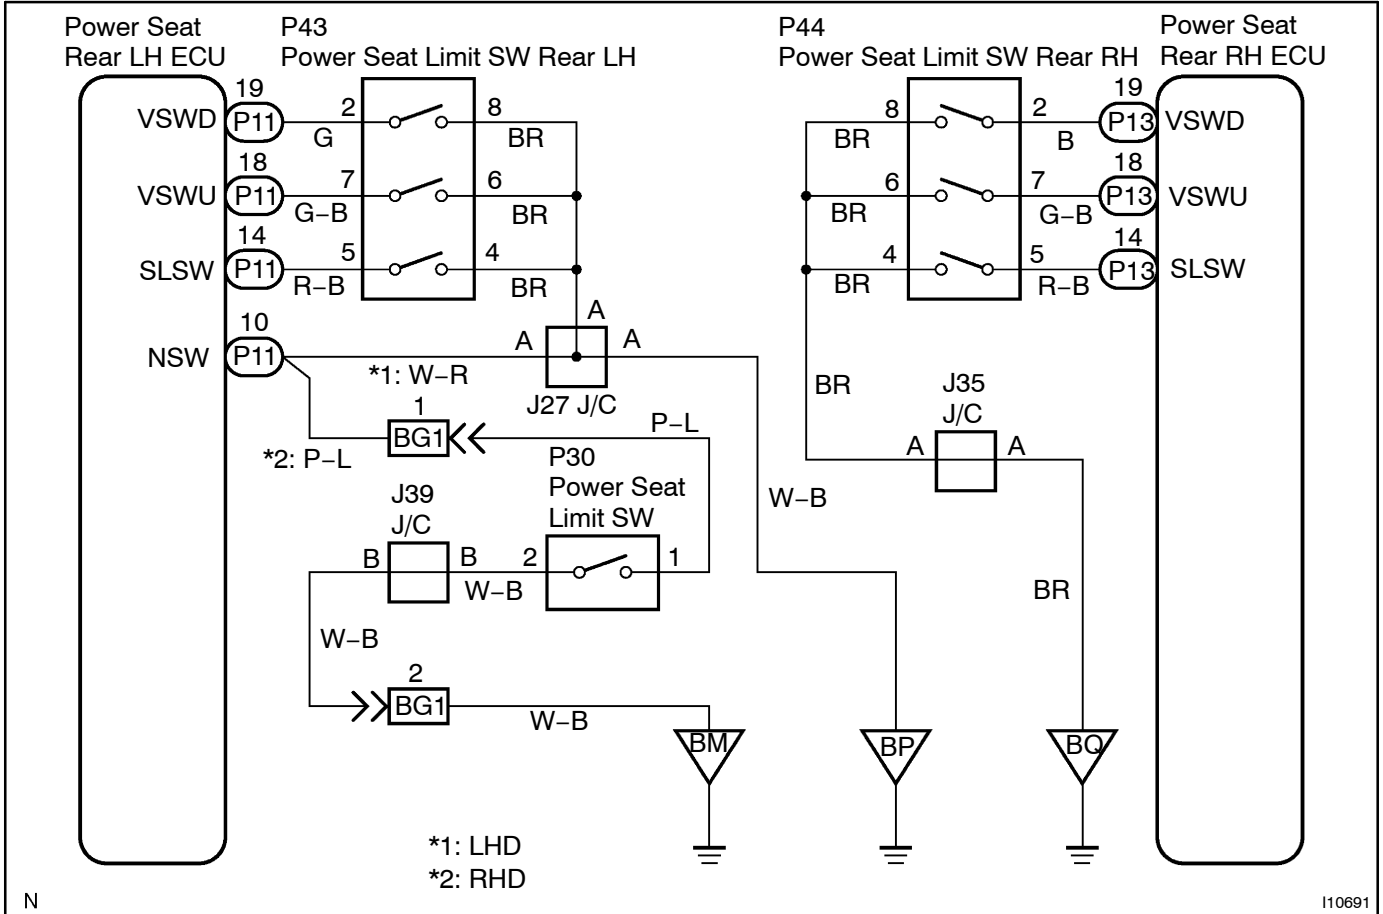

INSPECTION PROCEDURE

1 Check power seat limit switch (See page BE-129).

NG

Replace the limit switch.

OK

2 Check harness and connector between Rear Power Seat ECU and limit switch, limit switch and body ground (See page IN-30).

OK

Repair or replace harness or connector.

NG

Proceed to next circuit inspection shown in problem symptoms table (See page DI-387).