


DRIVE BELT ON-VEHICLE INSPECTION

AC0NV-02

1. INSPECT DRIVE BELT'S INSTALLATION CONDITION

Check that drive belt fits properly in the ribbed grooves.

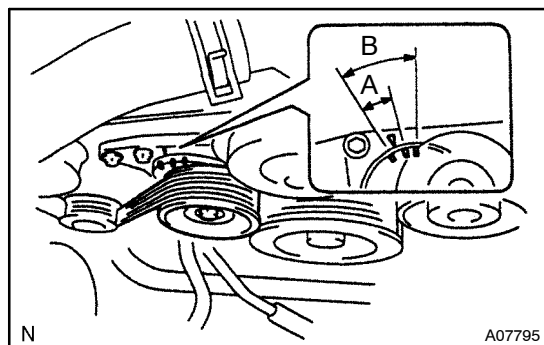

2. INSPECT DRIVE BELT

- (a) Remove the air cleaner inlet No. 1.
- (b) Check that the tension is within B range on the auto tensioner scale.

If the tension is not within the B range on the scale, replace the belt with a new one.

HINT:

When replacing the drive belt with a new one, the belt's tension should be within the B range on the belt tensioner scale.

- (c) Install the air cleaner inlet No. 1.