



REASSEMBLY

NOTICE:

When using a vise, do not overtighten it.

1. INSTALL COLUMN UPPER BRACKET

- (a) Install the column upper bracket with 2 new tapered-head bolts.
- (b) Tighten the 2 tapered-head bolts until the bolt heads break off.

2. INSTALL TELESCOPIC POSITION SENSOR

Install the telescopic position sensor with the 2 bolts.

3. INSTALL TILT POSITION SENSOR

Install the tilt position sensor with the bolt.

4. INSTALL NO. 1 STEERING LOWER TUBE BRACKET

Install the No. 1 steering lower tube bracket.

5. INSTALL WIRING HARNESS PROTECTOR COVER

Install the wiring harness protector cover and tighten the clamp.

6. INSTALL KEY CYLINDER LAMP ASSEMBLY AND TRANSPONDER KEY COIL

Install the key cylinder lamp assembly and transponder key coil with the screw.