



ADJUSTMENT

1. INSPECT BEAM AXIS

Standard: Must illuminate within 40 m.

2. ADJUSTMENT BEAM AXIS

Turn the beam axis aiming screw to adjust.

Standard: The beam must illuminate 20 mm below the fog light central height at 3 meters away.

HINT:

Tightening the aiming screw rises the beam direction while loosening the screw lowers it.

