



# REAR WHEEL HUB BOLT REPLACEMENT

SA1HY-01


## 1. REMOVE REAR WHEEL

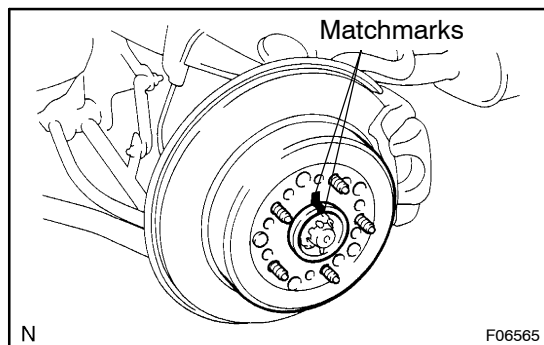

- ## 2. REMOVE BRAKE CALIPER AND DISC
- Place matchmarks on the disc and axle hub.

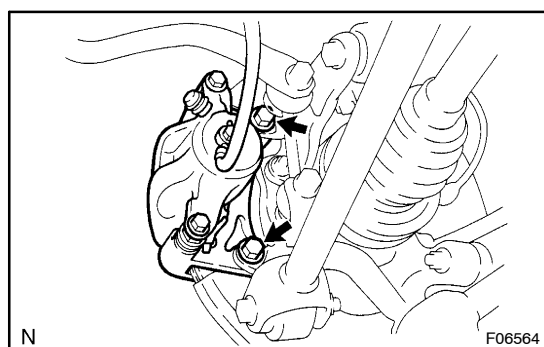


- Remove the 2 bolts and brake caliper.
- Support the brake caliper securely.
- Remove the 2 screws and disc.

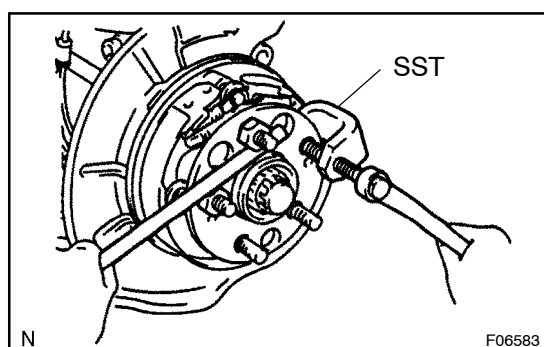

## 3. REMOVE HUB BOLT

Using SST and a hammer handle or an equivalent, remove the hub bolt.

SST 09628-10011

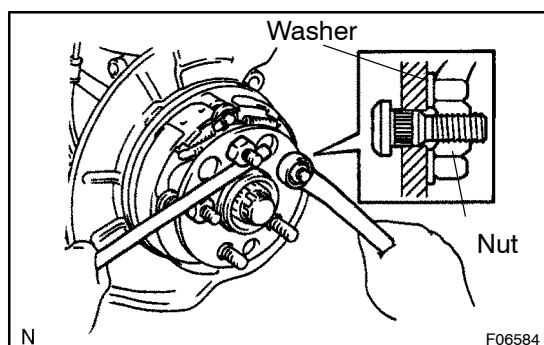

## 4. INSTALL HUB BOLT

- Install a washer and nut to a new hub bolt as shown in the illustration.
- Using a hammer handle or an equivalent to hold, install the hub bolt by torquing the nut.

5. **INSTALL DISC AND BRAKE CALIPER**
  - (a) Align the matchmarks on the disc and axle hub.
  - (b) Install the disc with 2 screws.  
**Torque: 5.0 N·m (55 kgf·cm, 44 in·lbf)**
  - (c) Install the brake caliper and 2 bolts.  
**Torque: 104 N·m (1,065 kgf·cm, 77 ft·lbf)**
6. **INSTALL REAR WHEEL**  
**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**
7. **DEPRESS BRAKE PEDAL SEVERAL TIMES**