

11 Warning indicator remains lighting.*

INSPECTION PROCEDURE

1 Check of multiplex communications.

CHECK:

Are communications between combination meter and body ECU normal?
(Refer of flowchart No. 1)

No

**Communication failure.
Faulty wiring harness.**

Yes

2 Check of tachometer indication.

CHECK:

Does tachometer indicate "---r/min" upon ignition switch ON?

Yes

Faulty Engine and ECT ECU.

No

3 Check of tachometer operation.

CHECK:

Does tachometer indicate nothing upon ignition switch ON?

No

Normal. (Refer to sections corresponding to respective warning and indicator.)

Yes

Faulty meter ECU.

*: When communications shut down during a warning from the Engine and ECT ECU and an indicator is lighting up, the status are maintained if the ignition switch is ON.