 


QUARTER PANEL (CUT)


REMOVAL





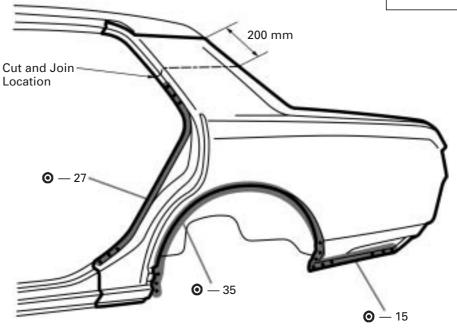

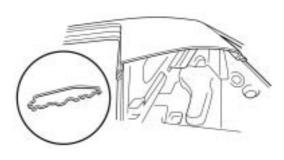


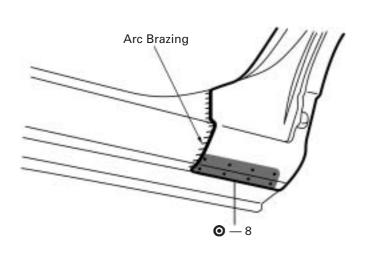


1. Cut and join the parts at the location as shown above.


HINT: Make incision and bend the roof drip channel at the upper part of the cut and join location.


mm	in.
200	7.87

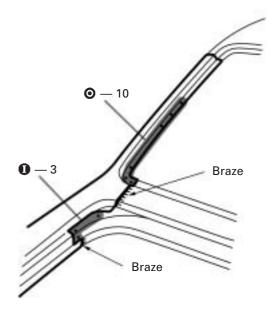


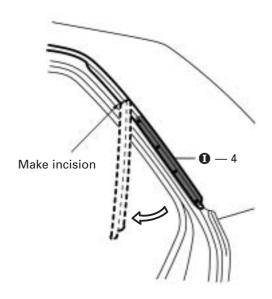

[If replacing the luggage compartment opening trough]

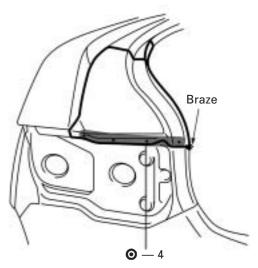

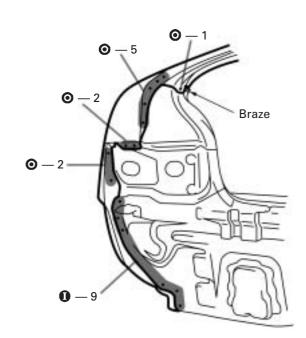


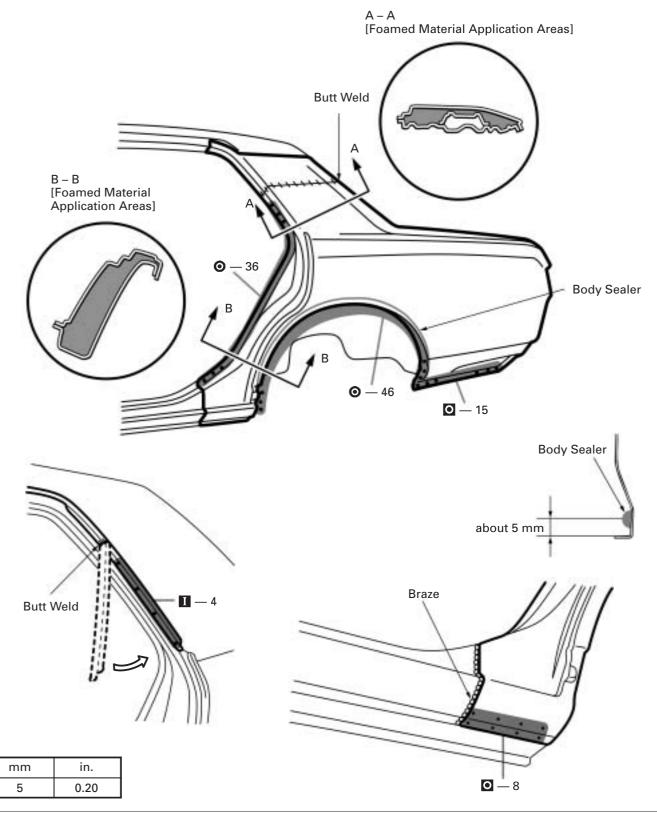

 Before temporarily installing the new parts, apply body sealer to the wheel arch.

HINT:

- 1) Apply body sealer about 5 mm (0.20 in.) from the flange, avoiding any oozing.
- 2) Apply sealer evenly, about 3 4 mm (0.12 0.16 in.) in diameter.
- 3) For other sealing points refer to section AR.
- 2. Temporarily install the new parts and check the fit of the rear door, luggage compartment door and rear combination light.
- 3. After installing the new parts, apply foamed material.

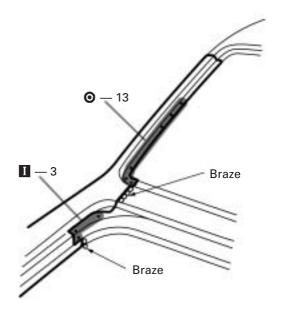

[It replacing the luggage compartment opening trouch]

