


## INSPECTION

### 1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Interior light switch OFF (Lever switch)	-	No continuity
Interior light switch DOOR (Lever switch)	1 - 3	Continuity
Interior light switch ON (Lever switch)	1 - 2	Continuity
*Personal light OFF (Push switch)	-	No continuity
*Personal light ON (Push switch)	1 - 2	Continuity

\*: Set the interior light switch to OFF or DOOR.

If continuity is not as specified, replace the light assembly or bulb.

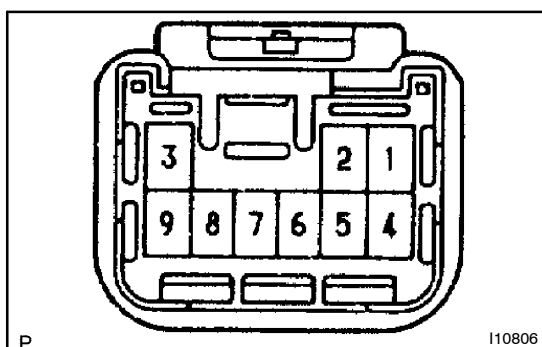

### 2. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Connect the connector to the switch.
- Check that continuity exists between terminals 6 and 7 when door is opened.
- Check that no continuity exists between terminals 6 and 7 when door is closed.

If continuity is not as specified, replace the switch.