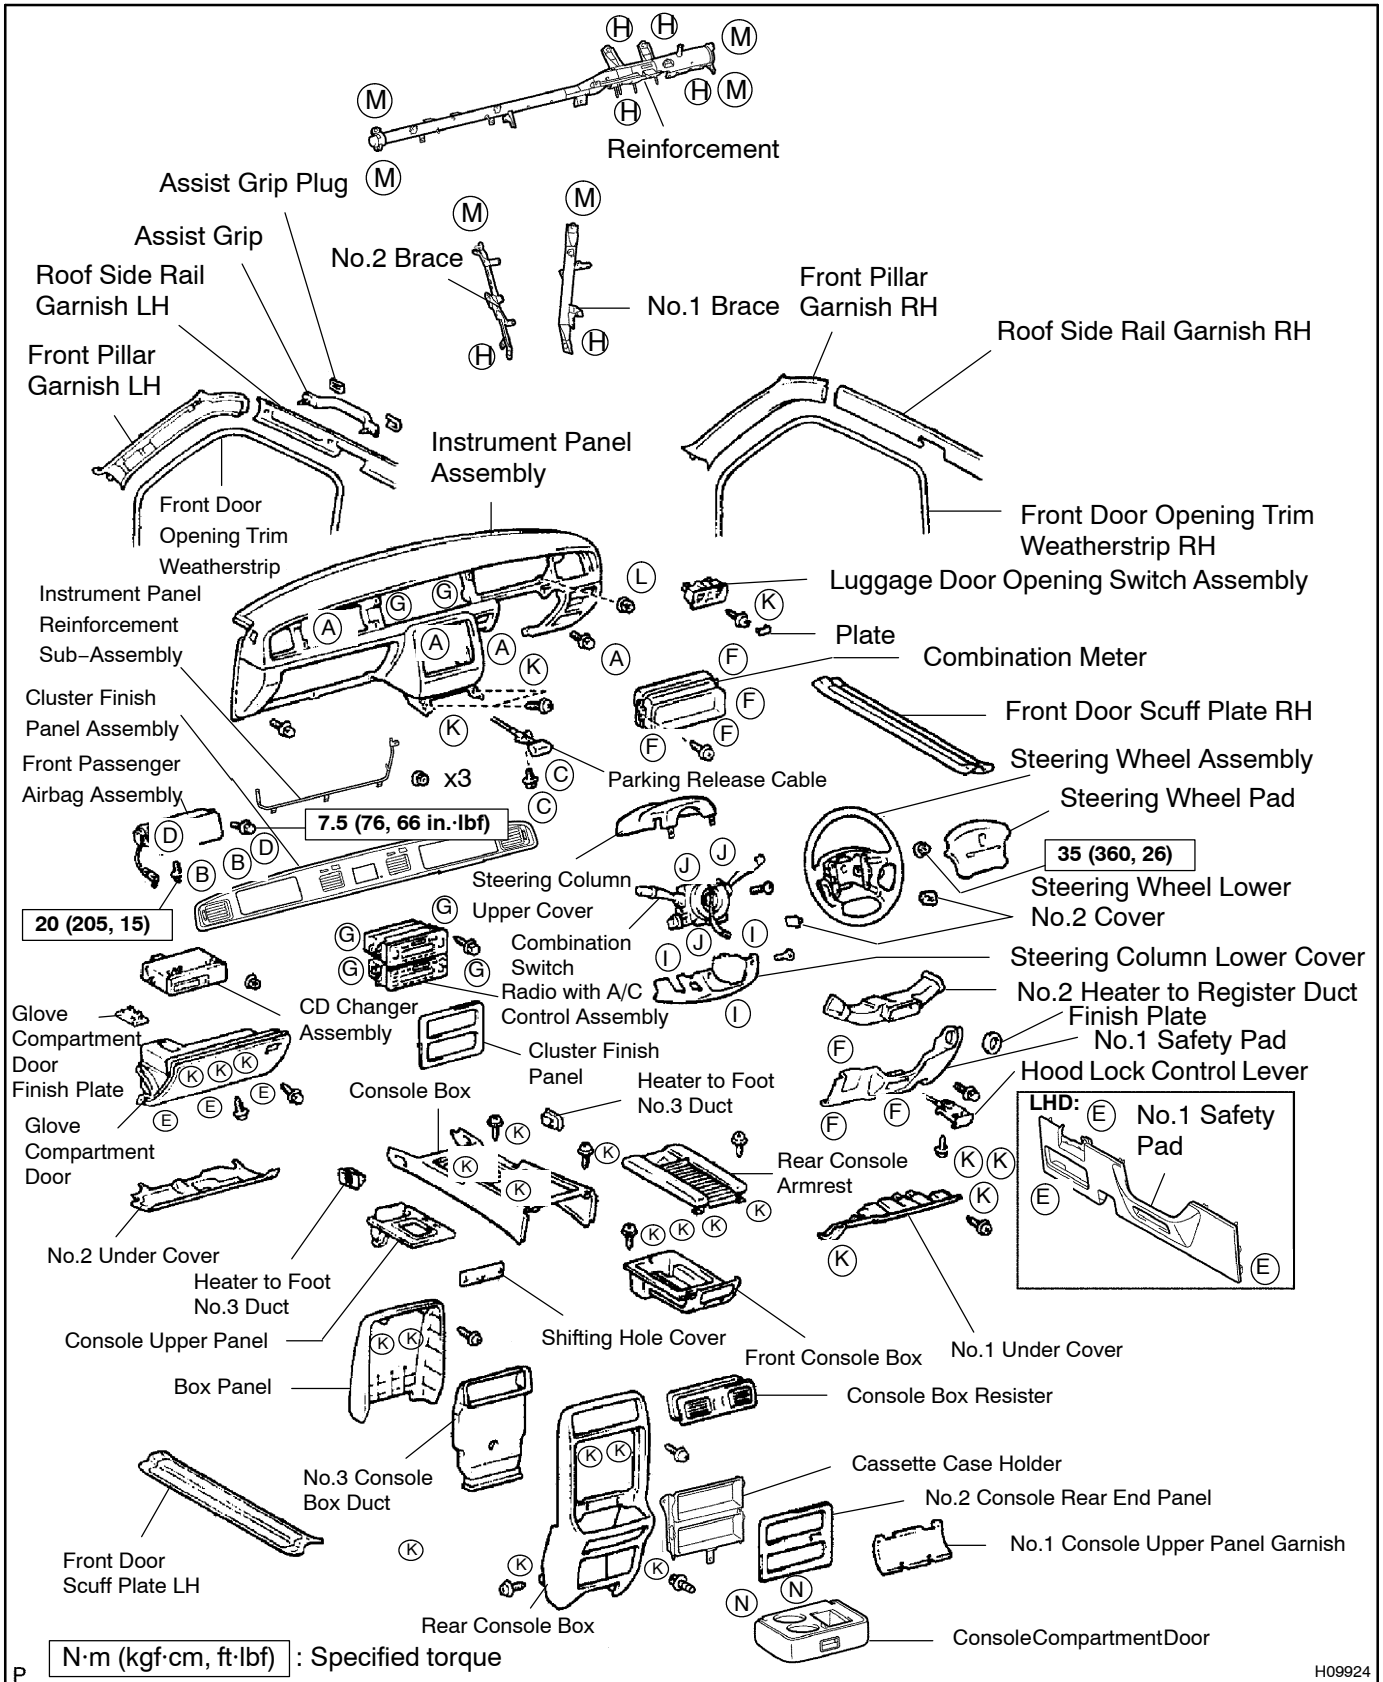
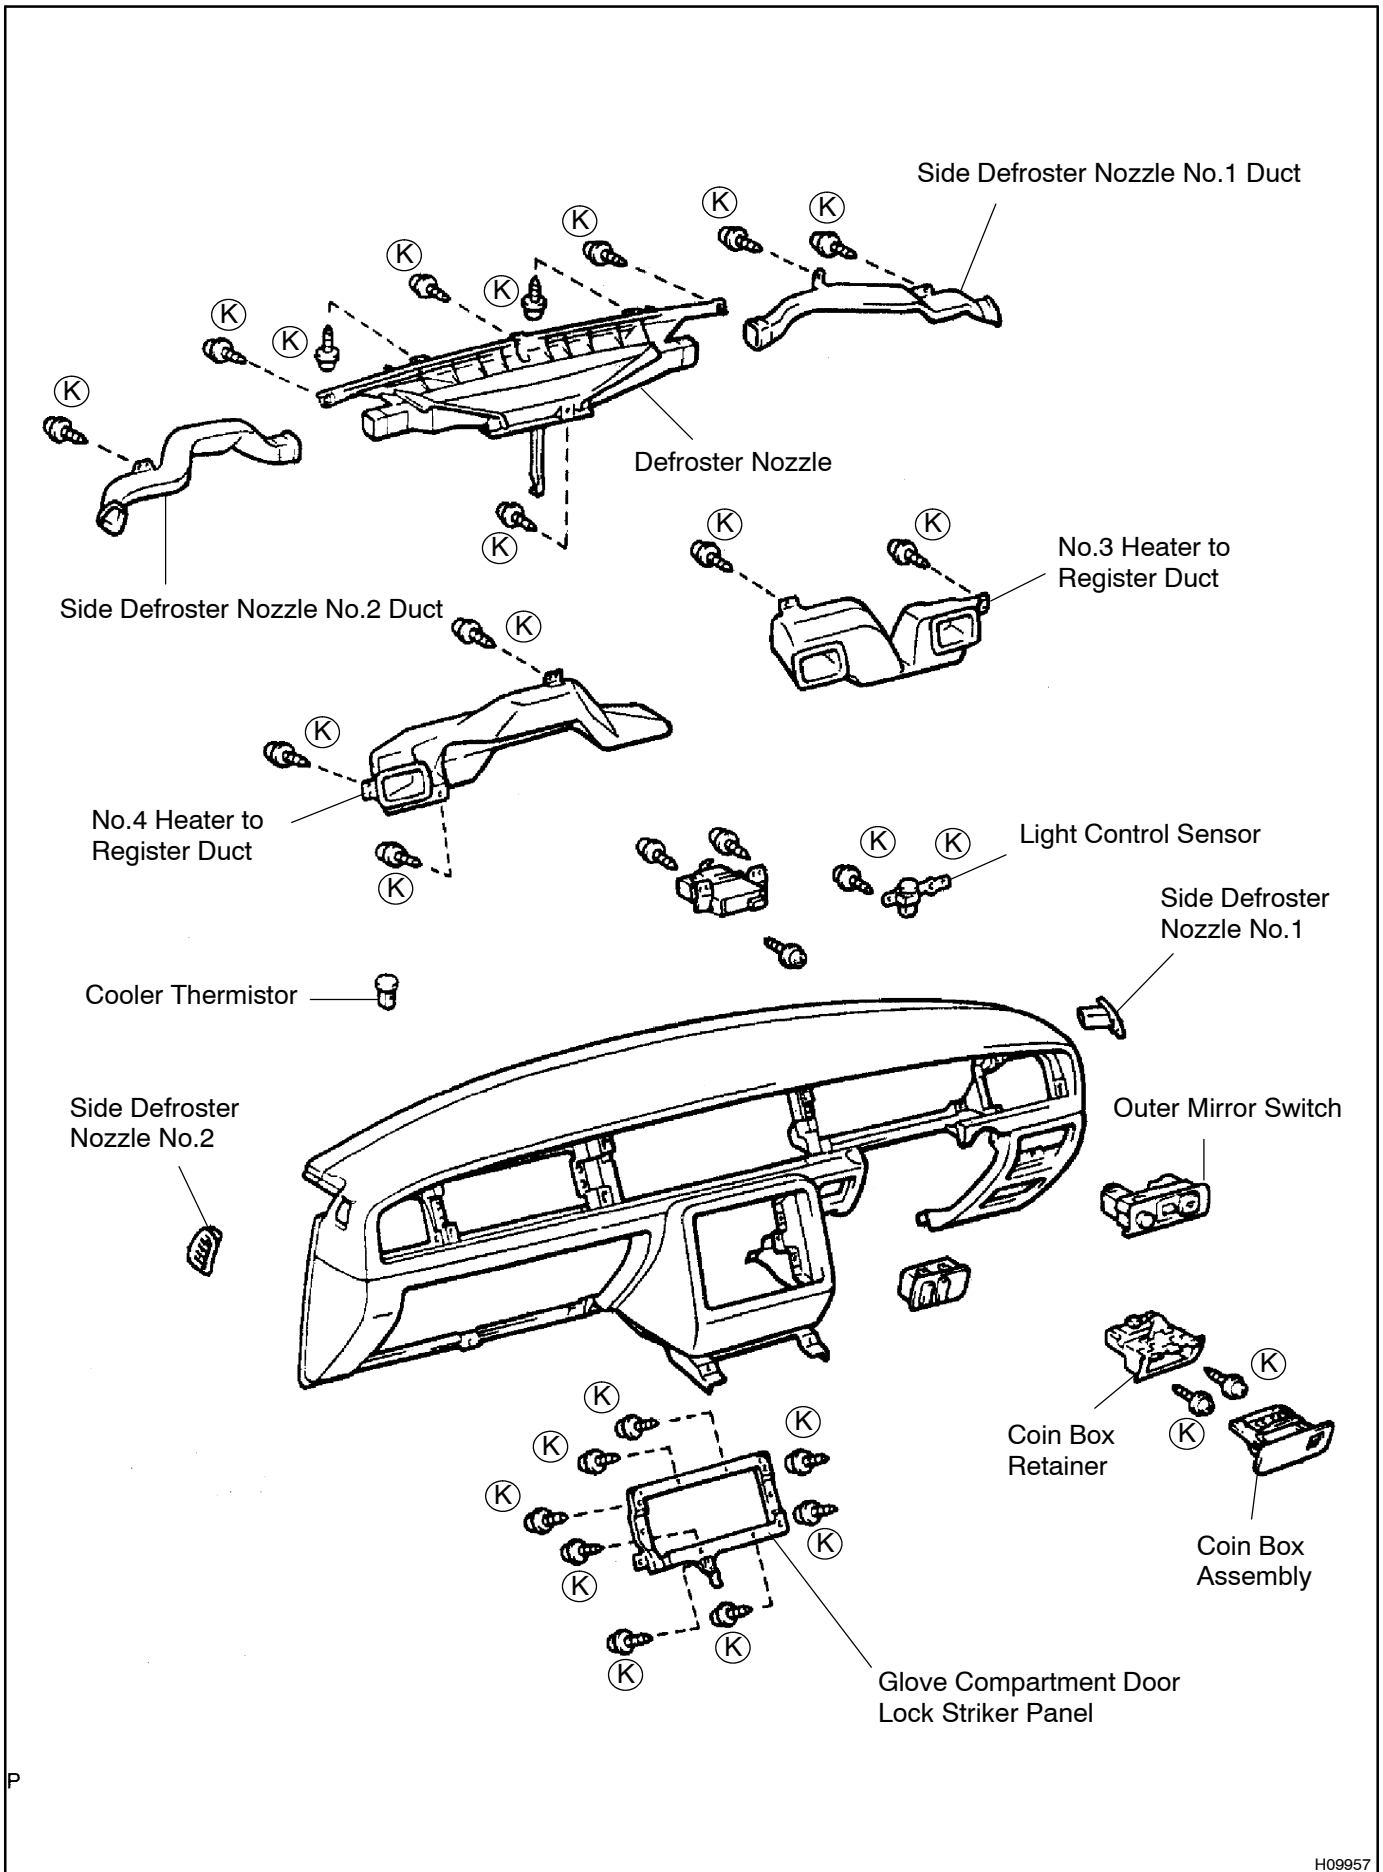


INSTRUMENT PANEL COMPONENTS

BO2A3-01



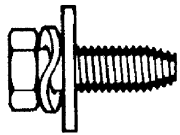
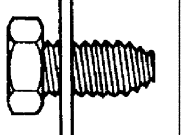
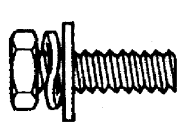
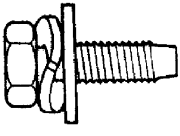
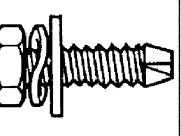
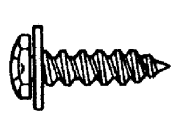
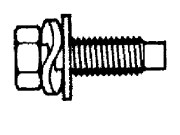
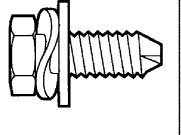
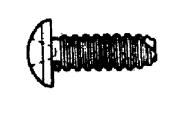
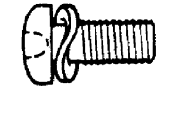

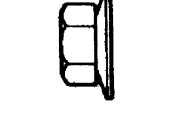
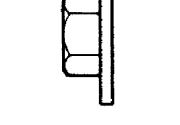
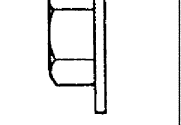
H09924



HINT:

Screw shapes and sizes are indicated in the table below. The codes (A-N) correspond to those indicated on the previous page.

mm (in.)

	Shape	Size		Shape	Size		Shape	Size
(A)		$\varnothing = 6$ (0.24) L = 20 (0.79)	(B)		$\varnothing = 8$ (0.31) L = 16 (0.63)	(C)		$\varnothing = 6$ (0.24) L = 20 (0.79)
(D)		$\varnothing = 6$ (0.24) L = 20 (0.79)	(E)		$\varnothing = 6$ (0.24) L = 22 (0.87)	(F)		$\varnothing = 5$ (0.20) L = 20 (0.79)
(G)		$\varnothing = 5$ (0.20) L = 18 (0.71)	(H)		$\varnothing = 8$ (0.31) L = 20 (0.79)	(I)		$\varnothing = 5$ (0.20) L = 15 (0.59)
(J)		$\varnothing = 5$ (0.20) L = 12 (0.47)	(K)		$\varnothing = 5.22$ (0.2055) L = 14 (0.55)	(L)		$\varnothing = 6$ (0.24)
(M)		$\varnothing = 6$ (0.24)	(N)		$\varnothing = 6$ (0.24)			