

INSPECTION

1. VEHICLE NOT INVOLVED IN COLLISION

Do a diagnostic system check. (See page DI-229)

2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

Do a diagnostic system check. (See page DI-229)

3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

Replace the airbag sensor assembly. (See page RS-62)