


Tc Terminal Circuit

CIRCUIT DESCRIPTION

By connecting terminals Tc and E₁ of the check connector or Tc and CG of the DLC3, the DTCs stored in the ECU memory can be displayed by the height control indicator light.

WIRING DIAGRAM

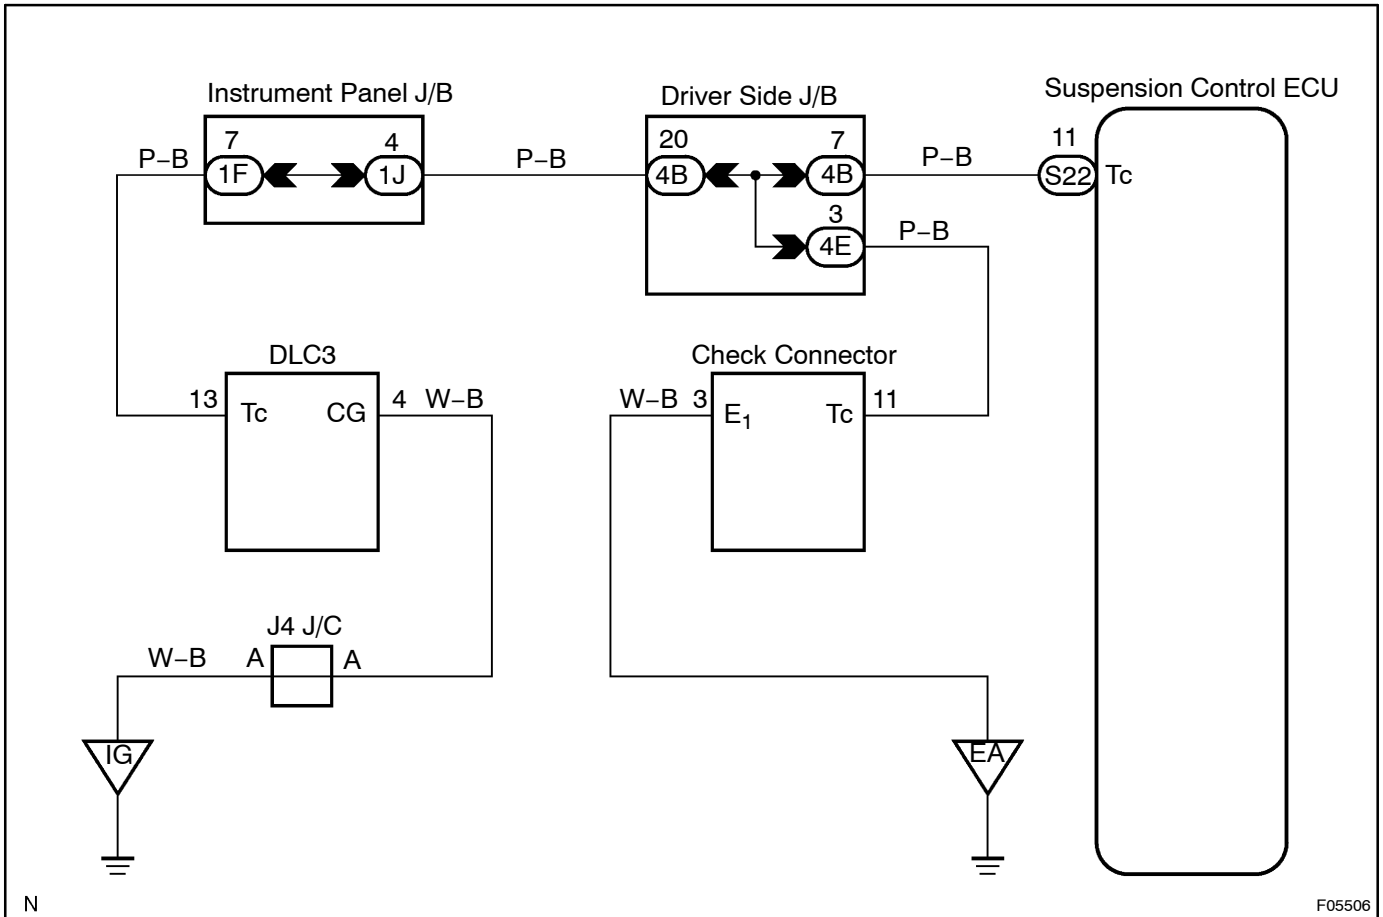


N

F05506

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of check connector or Tc and CG of the DLC3.

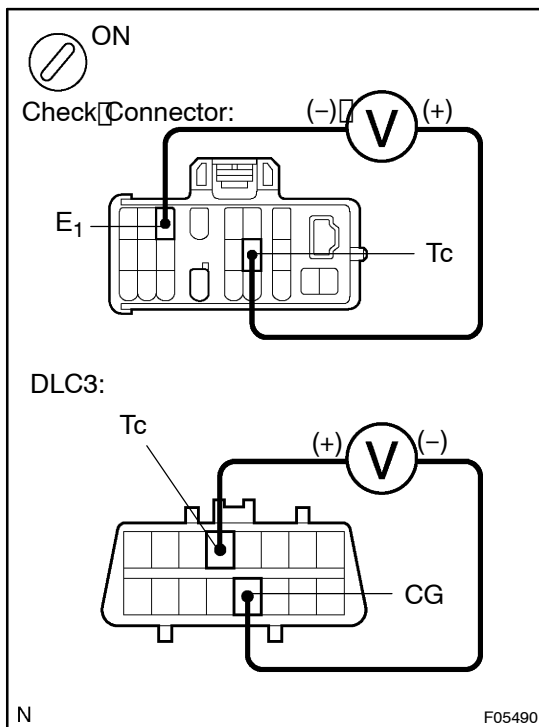**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and E₁ of the check connector or Tc and CG of the DLC3.

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-79).

NG

- 2 Check for open and short circuit in harness and connector between terminals E₁ of check connector or CG of DLC3 and body ground (See page IN-30).

NG

Repair or replace harness or connector.

OK

3

Check for open and short circuit in harness and connector between suspension control ECU and check connector or DLC3 (See page N-30).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.