


INSPECTION

1. INSPECT FUEL LID OPENER SWITCH CONTINUITY

- (a) Check that continuity exists between terminals with the switch ON (Lever pulled).
- (b) Check that no continuity exists between terminals with the switch OFF (Lever free).

If continuity is not as specified, replace the switch assembly.

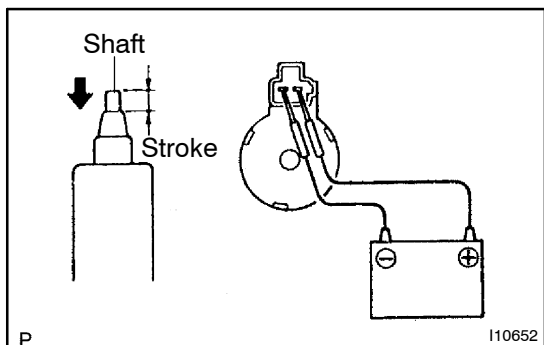

2. INSPECT FUEL LID OPENER SOLENOID OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and negative (-) lead to terminal 3.
- (b) Measure the shaft stroke 8 ± 0.5 mm.

If operation is not as specified, replace the solenoid.