

REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

HINT:

For step 1 to 3, refer to page BO-139.

1. REMOVE REAR DOOR SCUFF PLATE
2. REMOVE REAR SIDE SEATBACK ASSEMBLY
3. REMOVE REAR SEATBACK STAY COVER

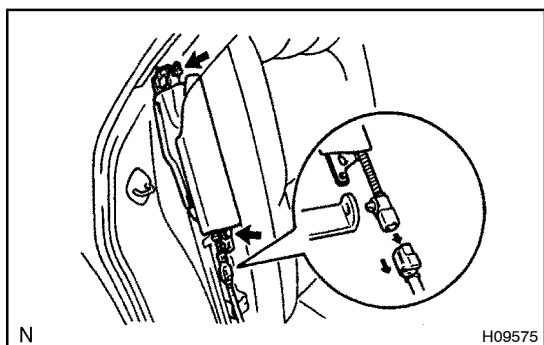

4. REMOVE REAR SIDE AIRBAG ASSEMBLY

- (a) Disconnect the connector of the rear side airbag assembly and disengage the clamp.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Remove the 2 bolts and rear side airbag assembly.

CAUTION:

- Do not store the rear side airbag assembly with the airbag deployment side facing downward.
- Never disassemble the rear side airbag assembly.