


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

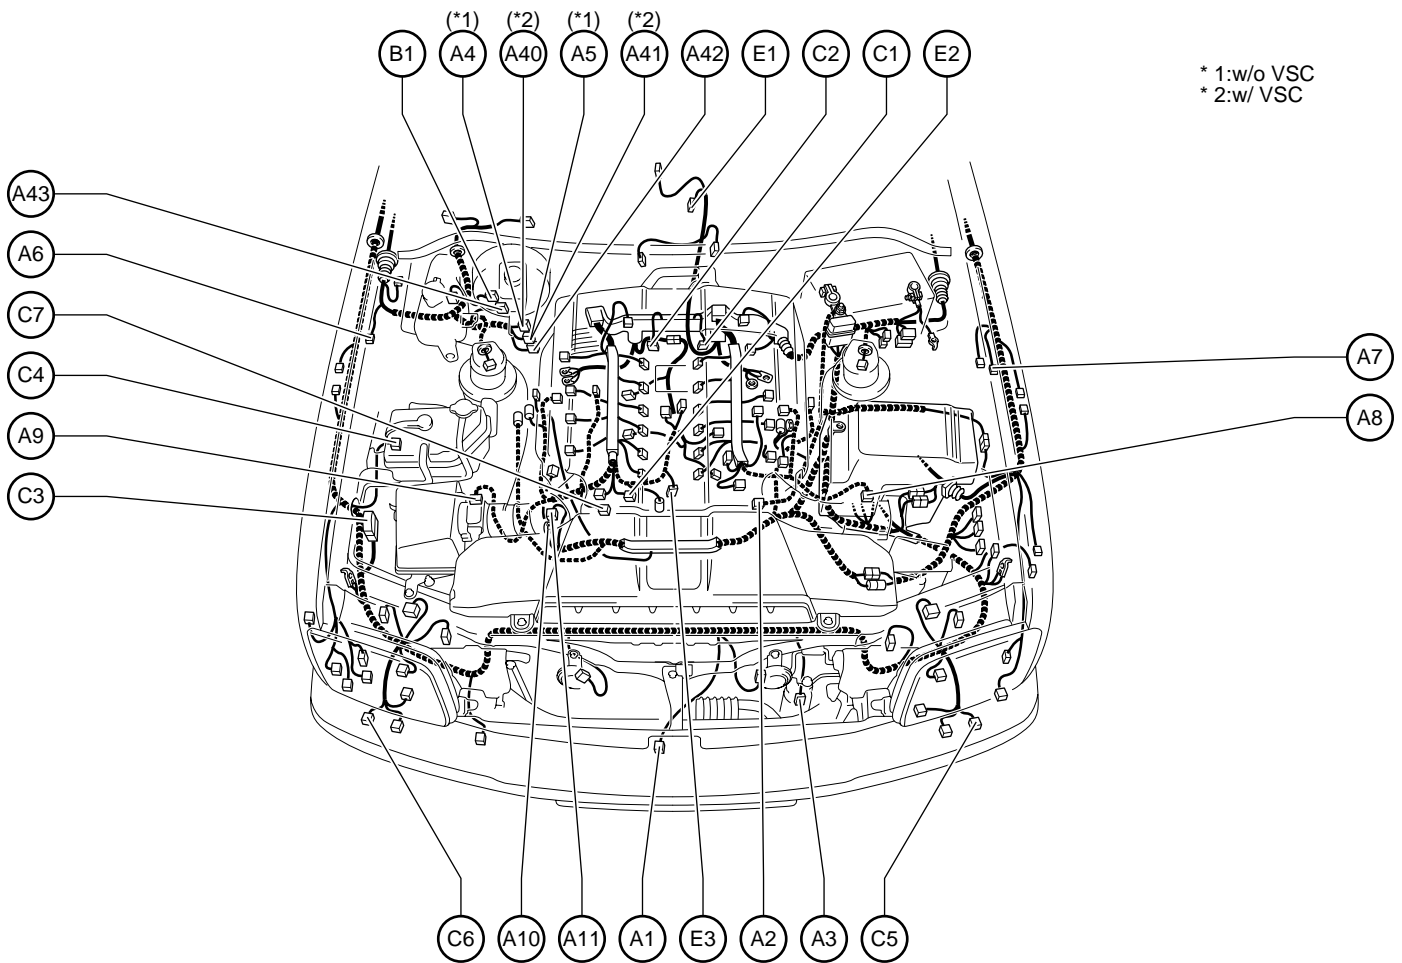

* 1:w/o VSC
* 2:w/ VSC

- | | |
|--|---|
| A 1 A/C Ambient Temp. Sensor | B 1 Brake Fluid Level Warning SW |
| A 2 A/C Magnetic Clutch and Lock Sensor | C 1 Camshaft Position Sensor (Left Bank Control) |
| A 3 A/C Pressure Sensor | C 2 Camshaft Position Sensor (Right Bank Control) |
| A 4 ABS and Traction Actuator | C 3 Check Connector |
| A 5 ABS and Traction Actuator | C 4 Coolant Level SW |
| A 6 ABS Speed Sensor and Pad Wear Indicator Front RH | C 5 Cornering Light LH |
| A 7 ABS Speed Sensor Front LH | C 6 Cornering Light RH |
| A 8 Air Flow Meter (Left Bank Control) | C 7 Crankshaft Position Sensor |
| A 9 Air Flow Meter (Right Bank Control) | E 1 ECT Solenoid |
| A 10 Alternator | E 2 EFI Water Temp. Sensor (Left Bank Control) |
| A 11 Alternator | E 3 EFI Water Temp. Sensor (Right Bank Control) |
| A 40 ABS & TRC & VSC Actuator | |
| A 41 ABS & TRC & VSC Actuator | |
| A 42 ABS & TRC & VSC Actuator | |
| A 43 ABS & TRC & VSC Actuator | |