



## INSTALLATION

### 1. INSTALL OIL COOLER PIPE


(a) Connect the 3 hoses and clamp them with the 3 clips.

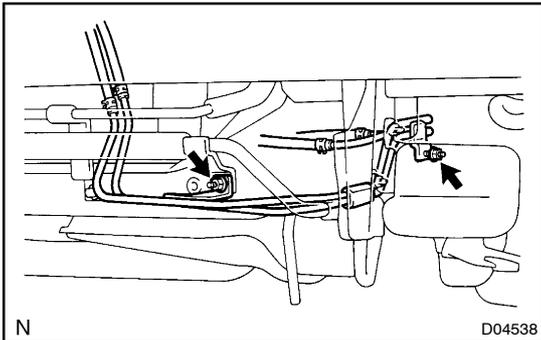

(b) Install the oil cooler pipe with 2 nuts.  
**Torque: 5.6 N·m (57 kgf·cm, 50 in·lbf)**

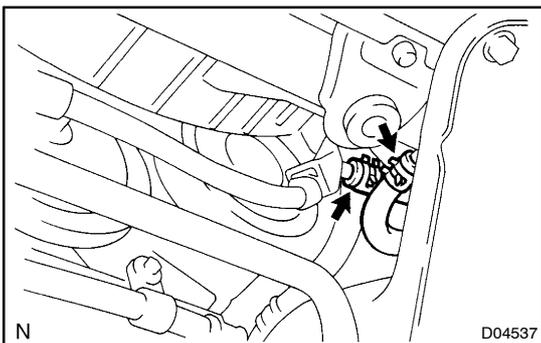


(c) Connect the 2 hoses and clamp the 2 clips.

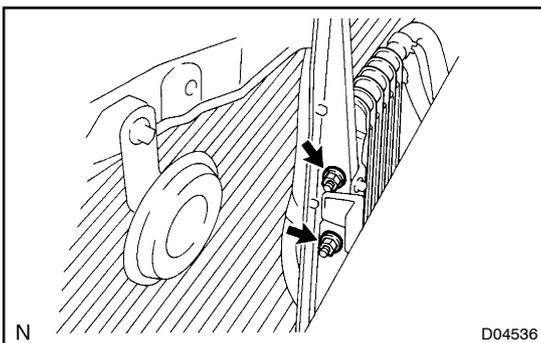

### 2. INSTALL OIL COOLER

(a) Install the oil cooler with 2 nuts.

**Torque: 5.6 N·m (57 kgf·cm, 50 in·lbf)**

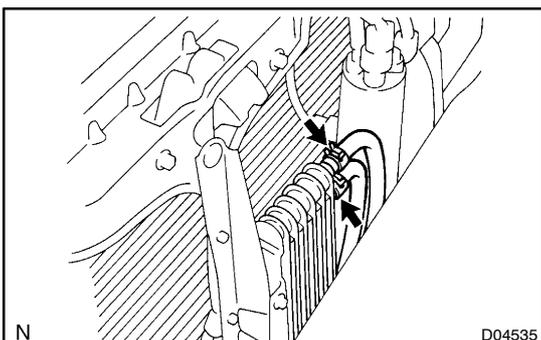

(b) Connect the 2 hoses and clamp them with the 2 clips.

### 3. INSTALL FRONT BUMPER COVER

(See page [BO-4](#))