

DTC	B1262/62	A/C ECU communication stop
------------	-----------------	-----------------------------------

CIRCUIT DESCRIPTION


This DTC is output when communication stops between Engine and ECT ECU and Body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1262/62	No communication from ECU more than 10 seconds.	<ul style="list-style-type: none"> • A/C ECU • Wireharness

WIRING DIAGRAM

See page DI-720.

1	Check wireharness
----------	--------------------------

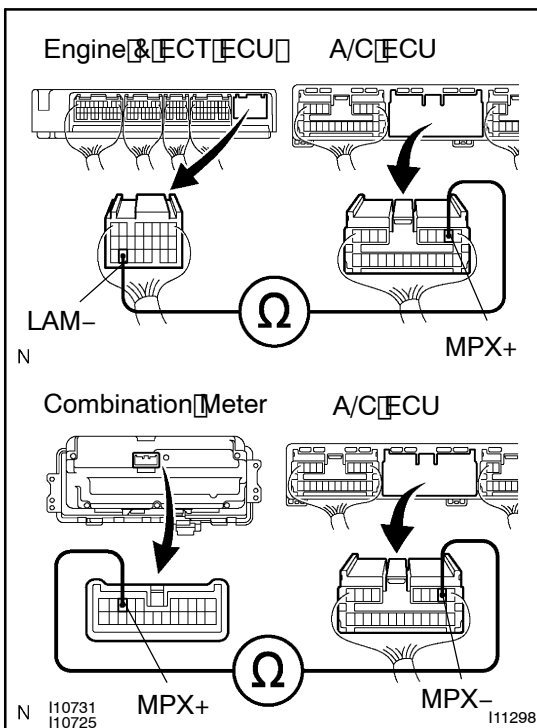

PREPARATION:

Disconnect connector of "C11" of combination meter ECU "A13" of A/C ECU and Engine and ECT ECU.

CHECK:

- Check continuity between terminals MPX+ of A/C ECU and LAM- of Engine and ECT ECU.
- Check continuity between terminals MPX+ of combination meter ECU and MPX- of A/C ECU.

OK:

There is a continuity in wireharness of both (a) and (b) or (a) and (c), (a) or either (b) or (c).

HINT:

If there is OPEN in wireharness of either (a), (b) or (c), please repair it.

NG

Repair or replace wireharness.

OK

Replace the A/C ECU.