


Taillight, stop light and rear fog light circuit

CIRCUIT DESCRIPTION

Receiving the brake pedal signal from either of the rear light LH ECU, the rear light RH ECU will make the stop light come on.

Receiving the light control switch TAIL signal from either of the rear light LH ECU, the rear light RH ECU will make the taillight come on.

WIRING DIAGRAM

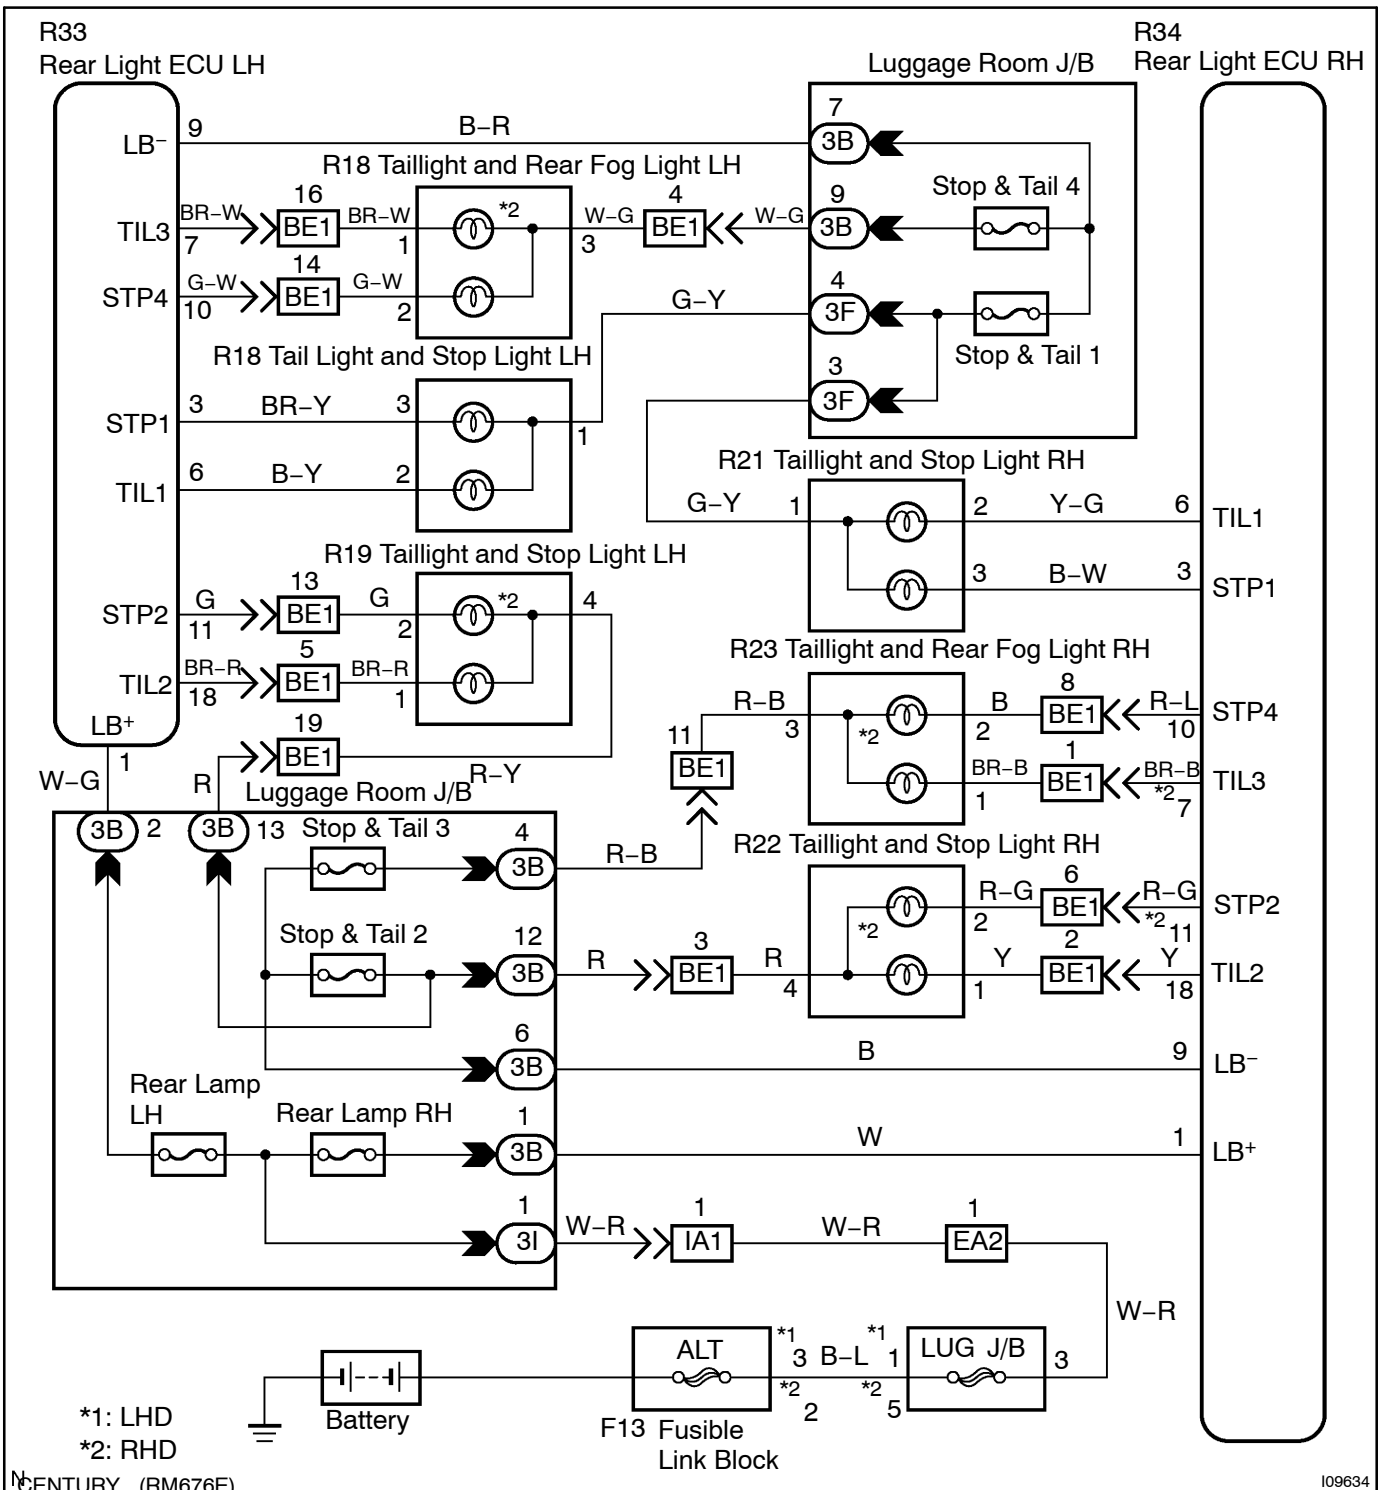

INSPECTION PROCEDURE

1 Check taillight, stop light and rear fog light (See page BE-2).

NG

Replace the failure light.

OK

2 Check wireharness and connector between each taillight, stop light, rear fog and rear light ECU, battery and taillight, stop light rear fog light (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-693).