


## INSPECTION

### 1. INSPECT LIGHT CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
TAIL	9 - 15	Continuity
HEAD	9 - 14 - 15	Continuity
AUTO	9 - 13	Continuity


If continuity is not as specified, replace the switch.

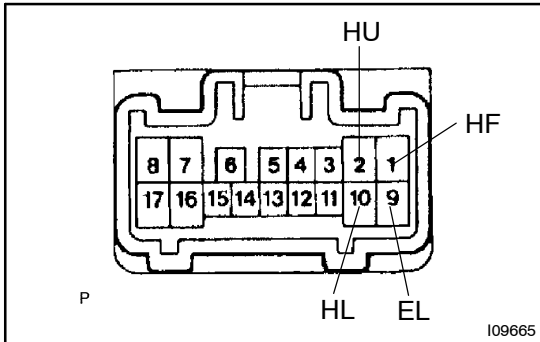

### 2. INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Low beam	9 - 10	Continuity
High beam	2 - 9	Continuity
Flash	1 - 2 - 9	Continuity


If continuity is not as specified, replace the switch.

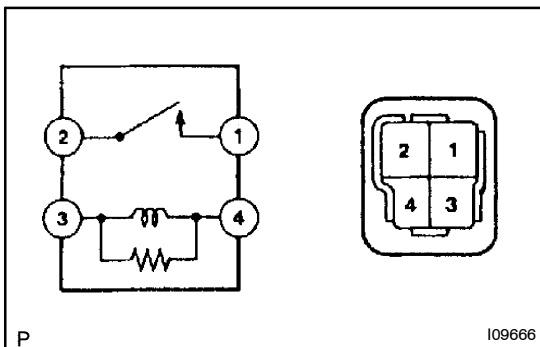

### 3. INSPECT HEADLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity


If continuity is not as specified, replace the relay.

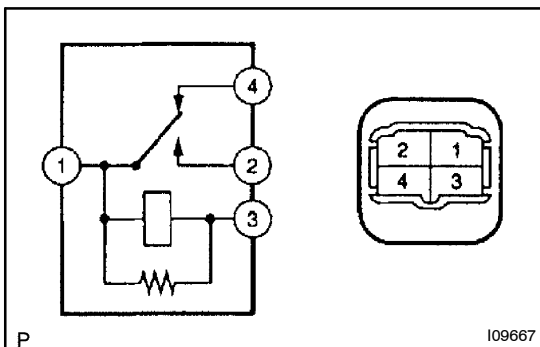

### 4. INSPECT HEADLIGHT DIMMER ( DAYTIME RUNNING LIGHT NO.2) RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 4 1 - 3	Continuity
Apply B+ between terminals 1 and 3.	1 - 2 - 4	Continuity

If continuity is not as specified, replace the relay.

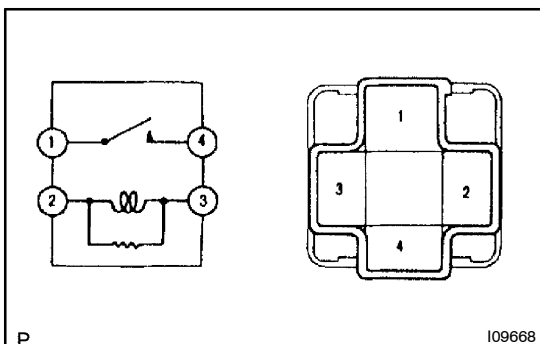

### 5. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 3	Continuity
Apply B+ between terminals 2 and 3.	1 - 4	Continuity

If continuity is not as specified, replace the relay.