


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

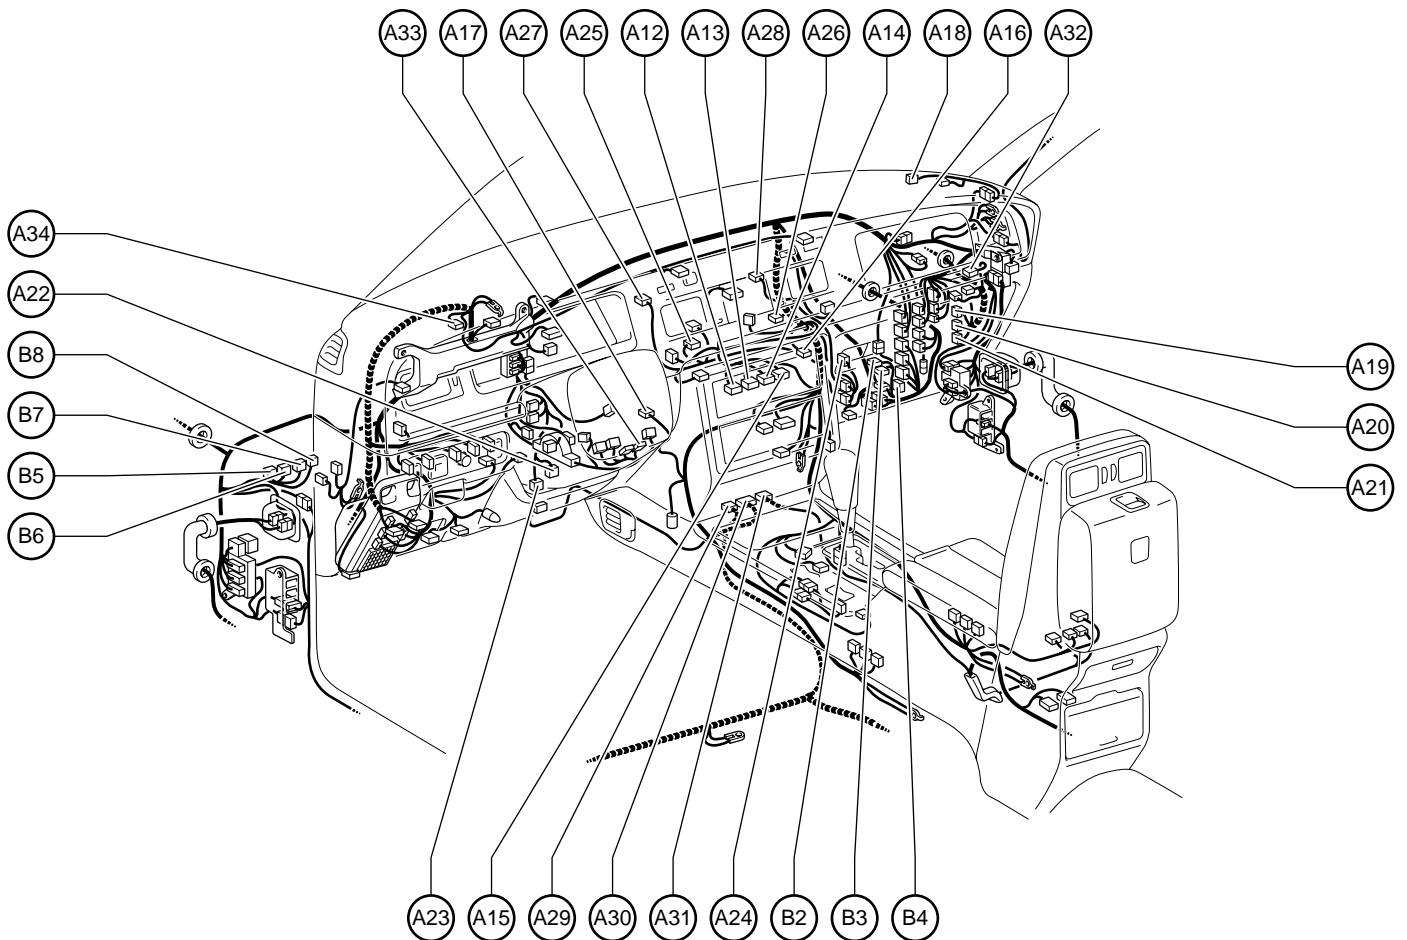

- | | |
|---|--|
| A 12 A/CControlAssembly | A 29 AirbagSensorAssembly |
| A 13 A/CControlAssembly | A 30 AirbagSensorAssembly |
| A 14 A/CControlAssembly | A 31 AirbagSensorAssembly |
| A 15 A/CControlAssembly | A 32 AirbagSquib(FrontPassenger'sAirbagAssembly) |
| A 16 A/CEvaporatorTemp.Sensor | A 33 AirbagSquib(SteeringWheelPad) |
| A 17 A/CRoomTemp.Sensor | A 34 AutomaticLightControlSensor |
| A 18 A/CSolarSensor | |
| A 19 ABSandTractionECU | B 2 BlowerController |
| A 20 ABSandTractionECU | B 3 BlowerController |
| A 21 ABSandTractionECU | B 4 BlowerMotor |
| A 22 AccelPositionSensor | B 5 BodyECU |
| A 23 AcceleratorPedalSW | B 6 BodyECU |
| A 24 AirInletControlServoMotor | B 7 BodyECU |
| A 25 AirMixControlServoMotor(DriverSide) | B 8 BodyECU |
| A 26 AirMixControlServoMotor(FrontPassengerSide) | |
| A 27 AirVentModeControlServoMotor(DriverSide) | |
| A 28 AirVentModeControlServoMotor(FrontPassengerSide) | |