

## SOLAR SENSOR INSPECTION

AC24P-01


### 1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor then disconnect the connector.

HINT:

Tap the screwdriver tip before use.

### 2. INSPECT SOLAR SENSOR CIRCUIT (See page DI-798)

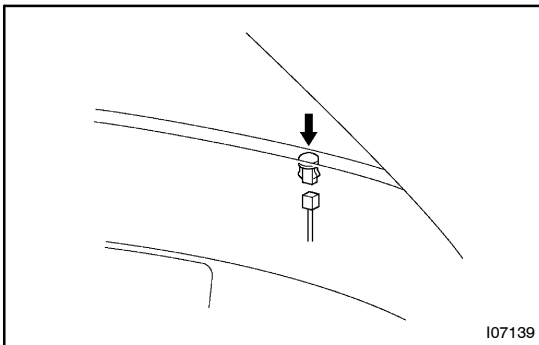

### 3. INSTALL SOLAR SENSOR

Install the solar sensor, then connect the connector.