


DTC	C1251 / 51	ABS Pump Motor Lock
------------	-------------------	----------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251 / 51	Either of the following 1. or 2. is detected: 1. Brake actuator pump motor is not operating normally. 2. Open circuit condition of brake actuator pump motor continues for 2 sec. or more.	<ul style="list-style-type: none"> • Brake actuator • Brake actuator circuit

WIRING DIAGRAM

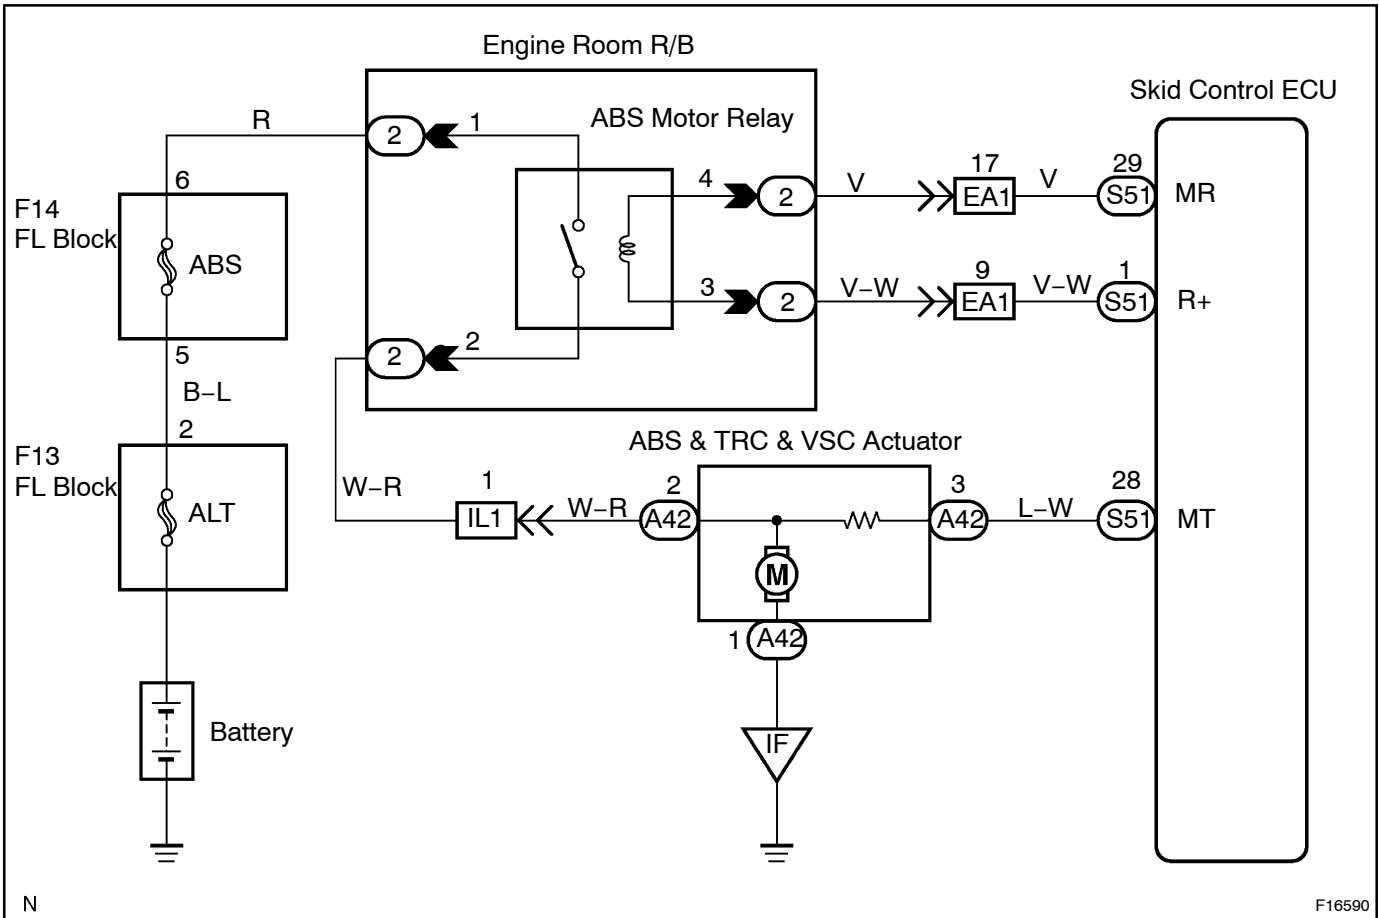


N

F16590

INSPECTION PROCEDURE

1 Check operation of pump motor.

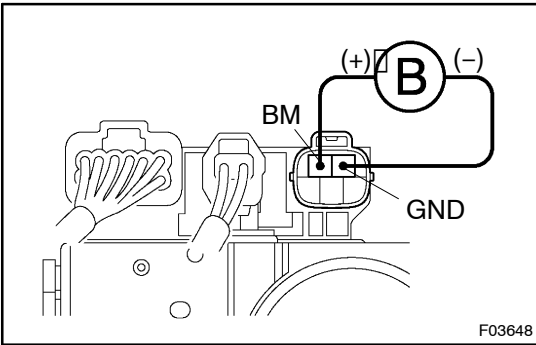**PREPARATION:**

Disconnect the connector from the brake actuator.

CHECK:

Connect positive \oplus lead to BM terminal and negative \ominus lead to GND terminal of the brake actuator, check that the pump motor is operated.

OK:

The running sound of the pump motor should be heard.

OK

Check for open circuit in harness and connector between ABS motor relay, brake actuator and ECU (See page N-31).

NG

Replace brake actuator.