



ADJUSTMENT

1. ADJUST LUGGAGE COMPARTMENT DOOR

- (a) Remove the package tray trim (See page BO-85).
- (b) For forward/rearward and left/right adjustment, loosen the bolts.

2. ADJUST LUGGAGE CLOSER MOTOR

- (a) Remove the luggage compartment trim rear cover (See page BO-43).
- (b) Adjust door's rear edge vertical orientation with the limit switch mounting position.

HINT:

Tentatively secure limit switch at an upper side, and screw in the bolt for fine adjustment to the limit switch position.

Bolt:

L: 30.0 + 5.0 mm (1.181 + 0.197 in.)

M: 6.0 mm (0.236 in.)

Pitch: 1.0 mm (0.039 in.)

