


REPLACEMENT

1. REMOVE LICENCE PLATE LIGHT BULB

- (a) Remove the license plate light lens.
- (b) Remove the socket and then the bulb.

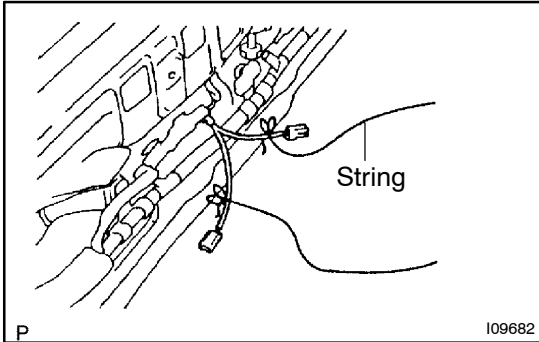

2. REMOVE LICENSE PLATE LIGHT ASSEMBLY

- (a) Remove luggage compartment lid striker cover.
- (b) Remove luggage compartment trim rear cover.
- (c) Disconnect engagement between the connector and wiring harness grommet from the luggage compartment side.
- (d) Tie the string to the tip of each connector (2 connectors).
- (e) Disconnect pins from lens using a (-) screwdriver with its tip being wound by protective tape.
- (f) Remove the bulb socket for the right lens, pull out the left lens and remove the license plate light assembly.

