


VSC Warning Light Circuit

CIRCUIT DESCRIPTION

If the ECU stores DTC, the VSC warning light lights on the combination meter.

WIRING DIAGRAM

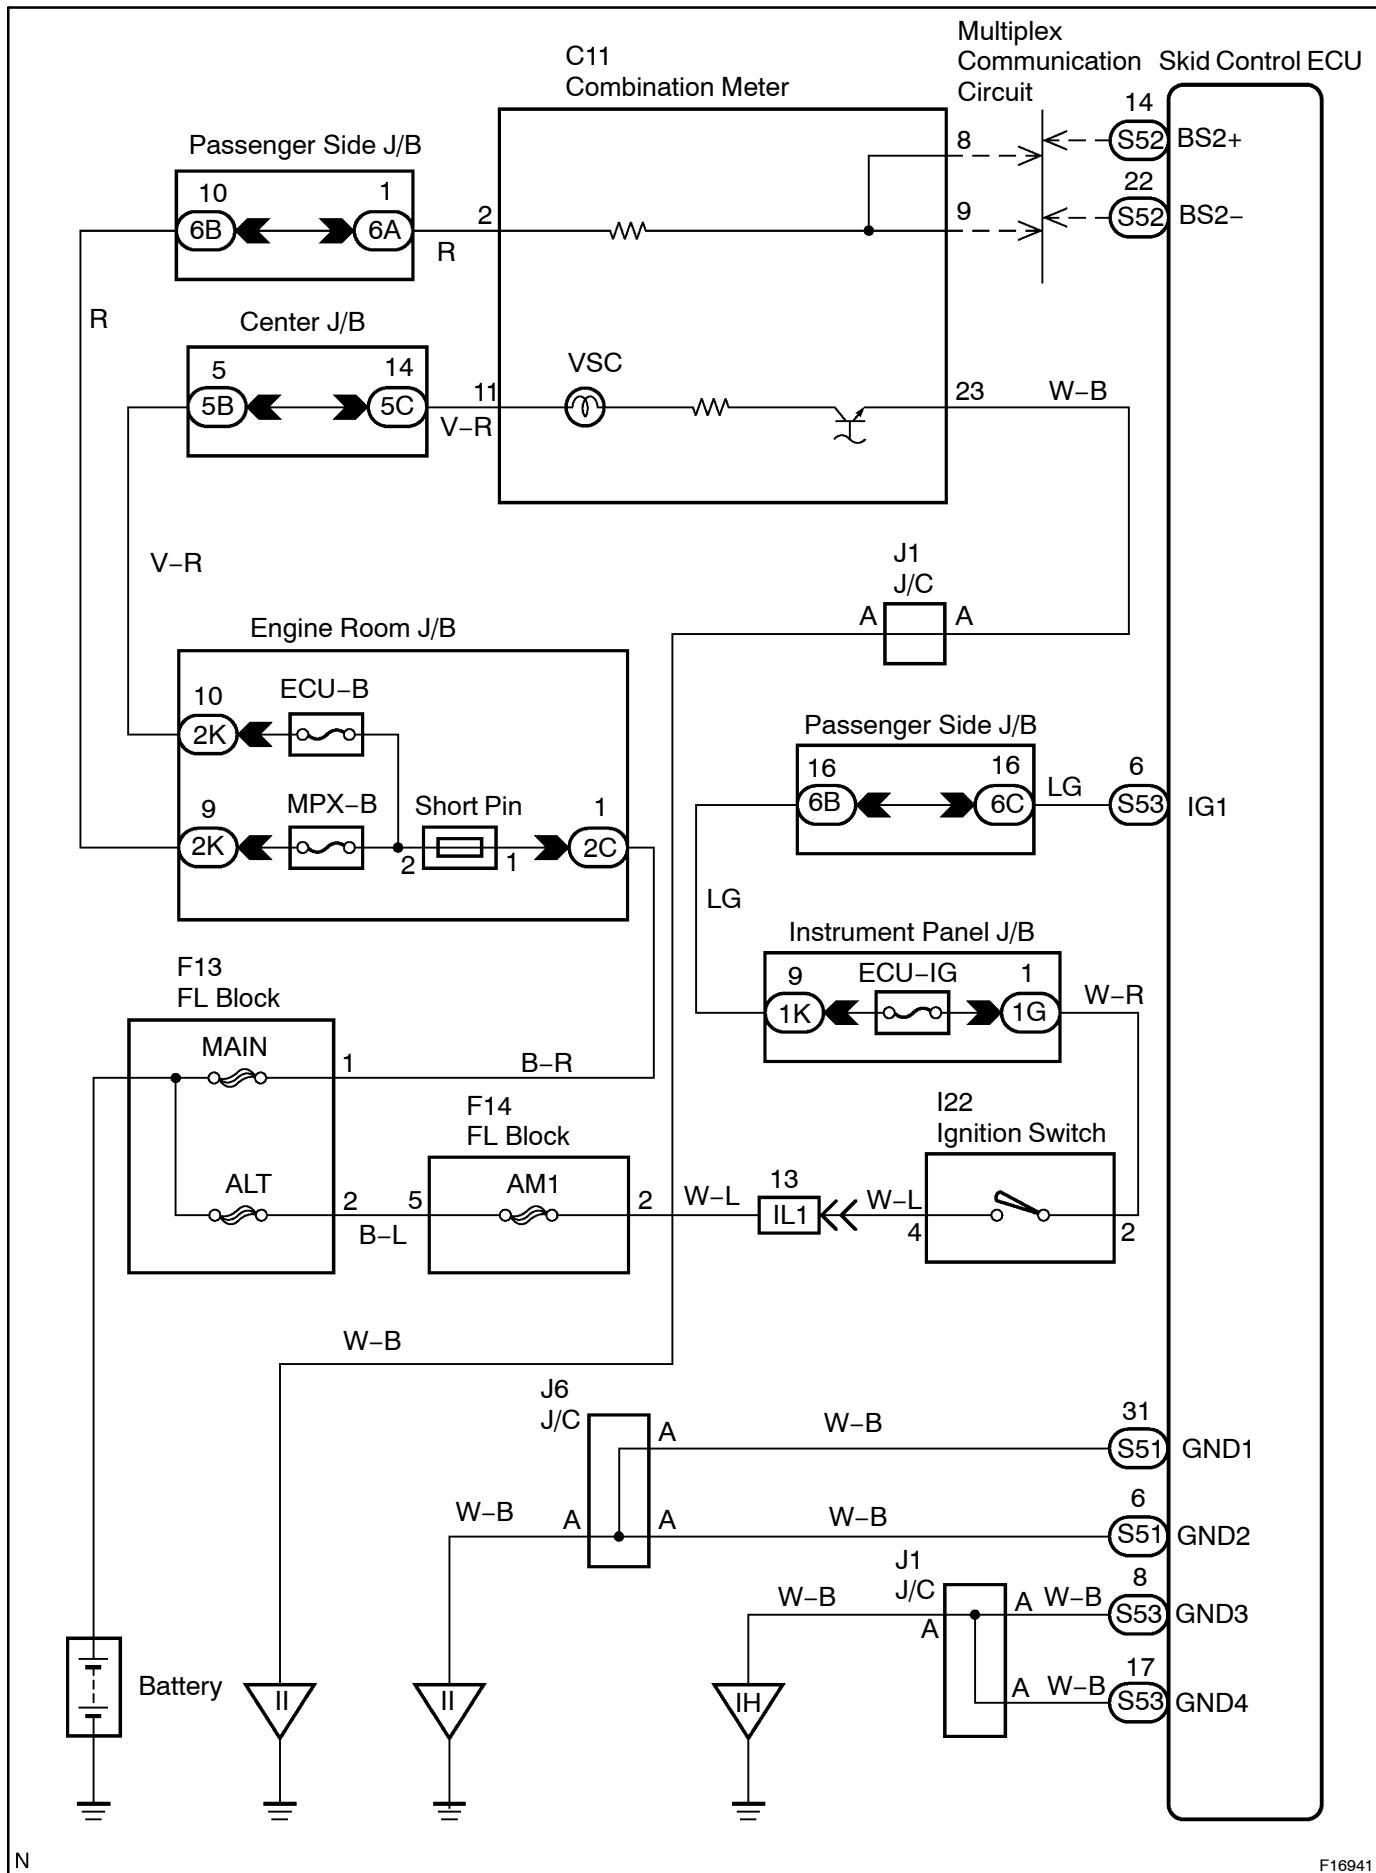

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

- | | |
|---|--|
| 1 | Check operation of the VSC warning indicator. |
|---|--|

PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch to ON and push the hand-held tester main switch to ON.
- (c) Select the ACTIVE TEST mode on the hand-held tester.

CHECK:

Check that "ON" and "OFF" of the VSC warning light can be shown on the combination meter with the hand-held tester.



Check and replace skid control ECU.

NG

- | | |
|---|---------------------------------|
| 2 | Check VSC warning light. |
|---|---------------------------------|

See combination meter troubleshooting.



Repair or replace combination meter.

OK

- | | |
|---|--|
| 3 | Check for open and short circuit in multiplex communication system between skid control ECU and combination meter (See page IN-31). |
|---|--|



Repair or replace harness or connector.

OK

Check and replace skid control ECU.