


**Fusible Link Block**

**Engine Compartment Left (See Page 76)**

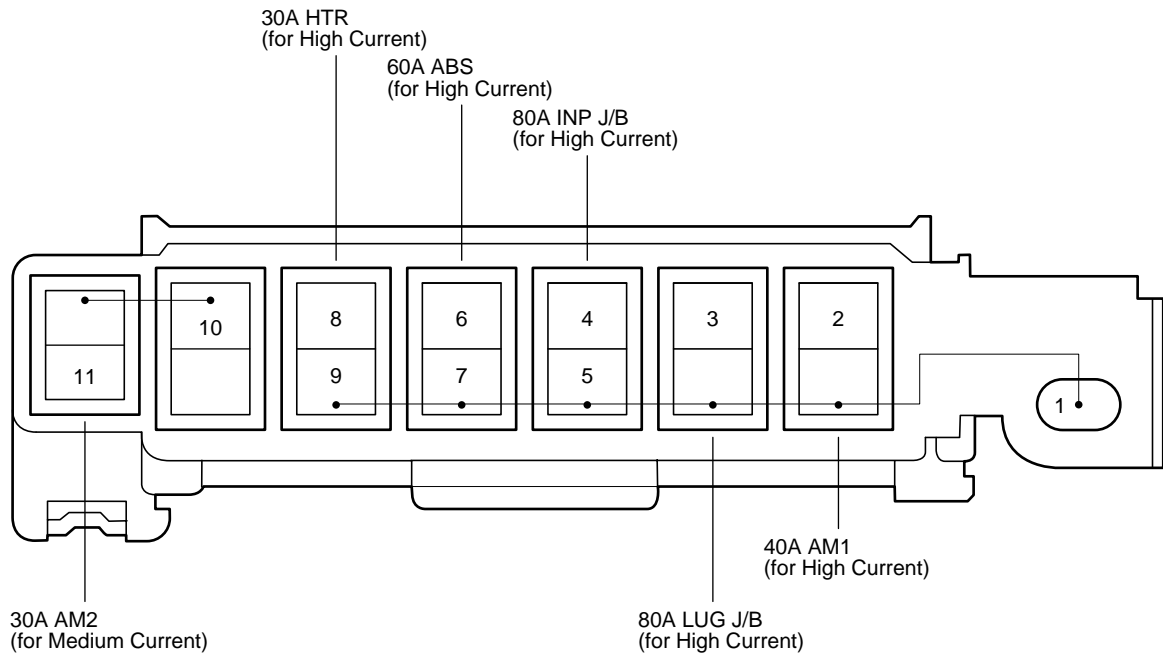

**Fusible Link Block**

**Near the Battery (See Page 76)**

