

REMOVAL

HINT:

Removal of the thermostat would have an adverse effect, causing lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to over heat.

1. **DRAIN ENGINE COOLANT**
2. **REMOVE AIR CLEANER ASSEMBLY RH WITH AIR FLOW METER**
3. **REMOVE THERMOSTAT**
 - (a) Remove the 4 nuts holding the water inlet to the water pump, and disconnect the water inlet from the water pump.
 - (b) Remove the thermostat.
 - (c) Remove the gasket from the thermostat.