

INSTALLATION

1. INSTALL COOLING FAN OIL COOLER

Install the oil cooler and 2 nuts.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

2. CONNECT 2 HOSES

Connect the 2 return hoses to the oil cooler.

3. INSTALL FRONT BUMPER

4. BLEED ELECTRONICALLY CONTROLLED HYDRAULIC COOLING FAN SYSTEM

(See page CO-20)