


FRONT WHEEL HUB BOLT REPLACEMENT


SA1HO-01

1. REMOVE FRONT WHEEL

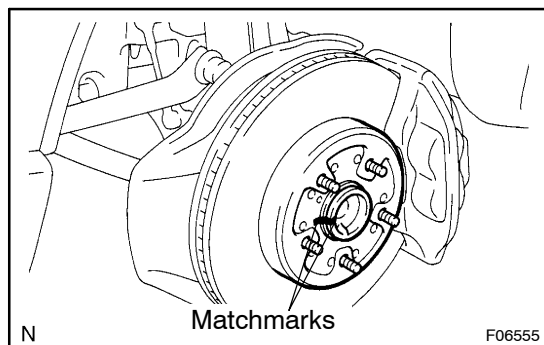


2. REMOVE BRAKE CALIPER AND DISC

- (a) Place matchmarks on the disc and axle hub.

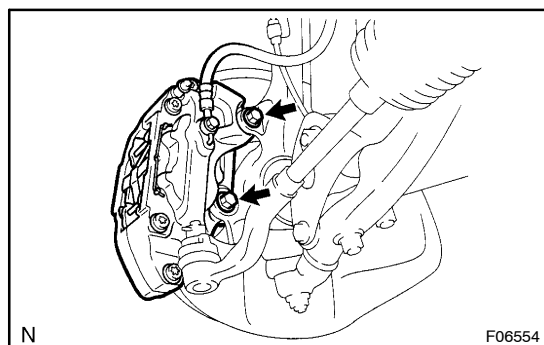


- (b) Remove the 2 bolts and brake caliper.
 (c) Support the brake caliper securely.
 (d) Remove the 2 screws and disc.

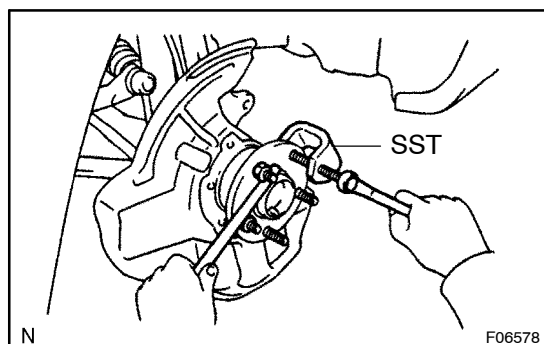

3. REMOVE HUB BOLT

Using SST and a hammer handle or an equivalent, remove the hub bolt.

SST 09628-10011

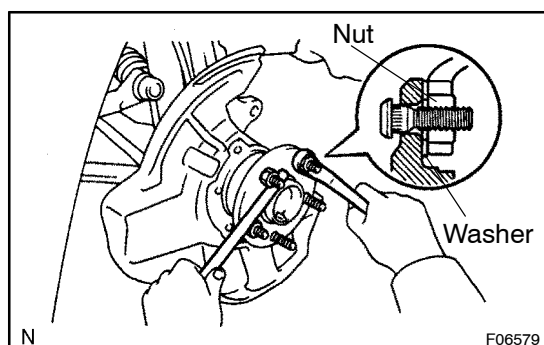

4. INSTALL HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
 (b) Using a hammer handle or an equivalent to hold, install the hub bolt by torquing the nut.

- 5. INSTALL DISC AND BRAKE CALIPER**
 - (a) Align the matchmarks on the axle hub and disc.
 - (b) Install the disc with 2 screws.
Torque: 5.0 N·m (55 kgf·cm, 44 in·lbf)
 - (c) Install the brake caliper and 2 bolts.
Torque: 118 N·m (1,200 kgf·cm, 87 ft·lbf)
- 6. INSTALL FRONT WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
- 7. DEPRESS BRAKE PEDAL SEVERAL TIMES**