

REMOVAL

NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

HINT:

For step 1 to 18, refer to page BO-96.

1. REMOVE CLUSTER FINISH PANEL
2. REMOVE RADIO WITH A/C CONTROL ASSEMBLY
3. REMOVE SHIFTING HOLE COVER
4. REMOVE CONSOLE UPPER PANEL
5. REMOVE FRONT CONSOLE BOX
6. REMOVE REAR CONSOLE ARMREST
7. REMOVE CONSOLE BOX REGISTER
8. REMOVE BOX PANEL
9. REMOVE NO.3 CONSOLE BOX DUCT
10. REMOVE NO.2 CONSOLE REAR END PANEL
11. REMOVE CONSOLE COMPARTMENT DOOR
12. REMOVE NO.1 CONSOLE UPPER PANEL GARNISH
13. REMOVE CASSETTE CASE HOLDER
14. REMOVE REAR CONSOLE BOX
15. REMOVE HEATER TO FOOT NO.3 DUCT LH AND RH
16. REMOVE CONSOLE BOX
17. REMOVE NO.2 CONSOLE BOX DUCT
18. REMOVE NO.1 CONSOLE BOX DUCT

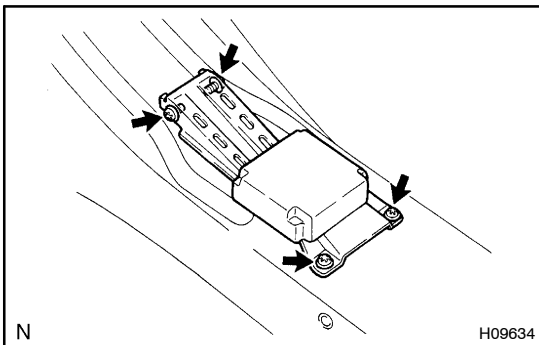

19. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor assembly connectors.

NOTICE:

Disconnect the connectors with the sensor assembly installed.

- (b) Using a torx wrench, loosen the 2 screws of front side, remove the 2 screws of rear side.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

- (c) Remove the airbag sensor assembly.