



ADJUSTMENT

ADJUST POWER WINDOW MOTOR LIMIT SWITCH

(a) Connect the master switch assembly to the wire harness and turn the ignition switch ON.

(b) Close the window glass fully.

HINT:

Close by manual operation.

(c) Using a 2 mm round bar in diameter, press the reset switch to the force of 30 to 50 N (3 to 5 kgf), open the glass fully with a master switch.

HINT:

- When using a wire or equivalent, make sure that tip of it should be flat.
- Open by manual operation.
- Do not damage the rubber on the reset switch.

(d) Remove the round bar from the reset switch and fully close the window glass.

HINT:

Close by manual operation.

(e) Check that window glass can be fully opened and closed by automatic operation.

(f) Check functioning of power window.