


## INSTALLATION


### 1. INSTALL FLOOR SHIFT ASSEMBLY

- (a) Install the floor shift assembly with the 4 bolts.

**Torque: 8.3 N·m (85 kgf·cm, 74 in·lbf)**

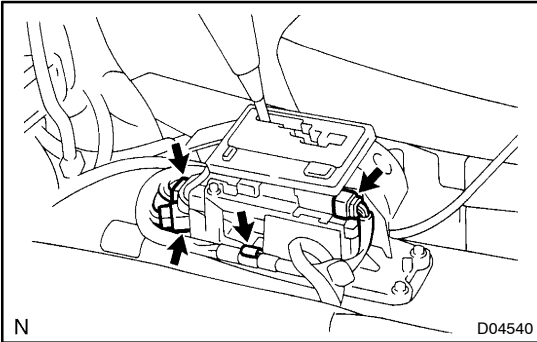

- (b) Connect the 3 connectors and clamp to the floor shift assembly.

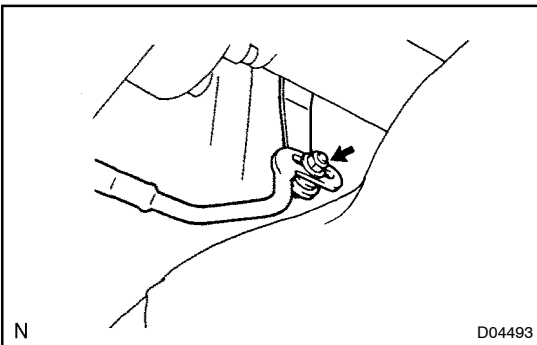

- (c) Install the floor shift assembly to the shift control rod with the nut.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**

### 2. INSTALL SHIFTING HOLE COVER

(See page [BO-93](#))

- Install the No. 1 console box duct.
- Install the No. 2 console box duct.
- Install the console box sub-assembly.
- Install the No. 3 console box duct.
- Install the box panel sub-assembly.
- Install the console box register assembly.
- Install the rear console armrest assembly.
- Install the front console box sub-assembly.
- Install the console upper cover.
- Install the shifting hole cover.

### 3. CHECK SHIFTING LEVER POSITION

(See page [DI-3](#))