
Position of Parts in Front Seat

[RHD]

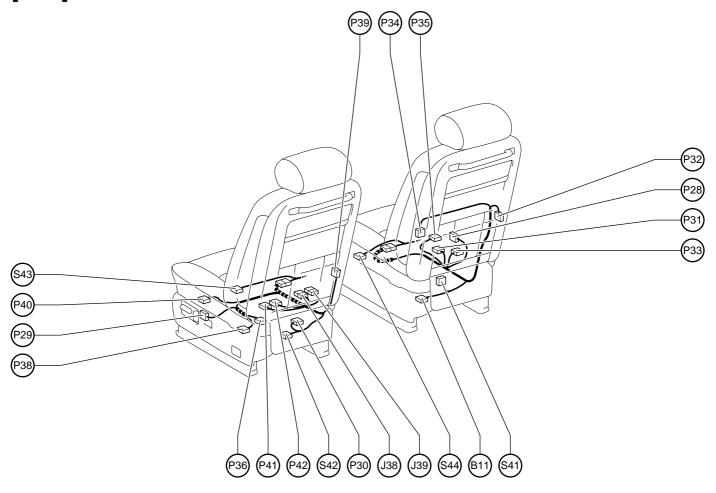

- B11 BuckleSW(DriverSide)
- J 38 JunctionConnector
- J 39 JunctionConnector
- P28 PowerSeatControlSW(Driver'sSeat)
- P29 PowerSeatControlSW(FrontPassenger'sSeat)
- P30 PowerSeatLimitSW(FrontPassenger'sSeat)
- P31 PowerSeatMotor(Driver'sSeatFrontVerticalControl)
- P32 PowerSeatMotor(Driver'sSeatLumbarSupportControl)
- $P33\ \ PowerSeatMotor(Driver's SeatRear Vertical Control)$
- P34 PowerSeatMotor(Driver'sSeatRecliningControl)
- P35 PowerSeatMotor(Driver'sSeatSlideControl)
- P36 PowerSeatMotor

(FrontPassenger'sSeatFrontVerticalControl)

- P38 PowerSeatMotor (FrontPassenger'sSeatRearVerticalControl)
- P39 PowerSeatMotor (FrontPassenger'sSeatRecliningControl)
- P40 PowerSeatMotor(FrontPassenger'sSeatSlideControl)
- P41 PowerSeatRelay(RecliningControl)
- P42 PowerSeatRelay(SlideControl)
- S41 SeatHeater(DriverSide)
- S42 SeatHeater(FrontPassengerSide)
- S43 SideAirbagSquibFrontLH
- S44 SideAirbagSquibFrontRH