

REMOVAL

1. REMOVE V-BANK COVER
2. DRAIN ENGINE COOLANT
3. REMOVE AIR CLEANER HOSE LH AND RH INTAKE AIR RESONATOR
4. REMOVE THROTTLE BODY ASSEMBLY LH AND RH
 - (a) Disconnect the throttle position sensor connector and throttle control motor connector from each throttle body assembly.
 - (b) Disconnect the 2 water by-pass hose No.3, vacuum hose and air hose from each throttle body assembly.
 - (c) Remove the 8 bolts, LH and RH throttle body assembly and 2 gaskets.