

INSTALLATION


1. INSTALL WASHER NOZZLES

2. INSTALL WIPER MOTOR


- (a) Install the wiper motor with the 3 bolts to the wiper link assembly.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Activate the wiper motor and stop at the automatic stopping position (See page BE-50).

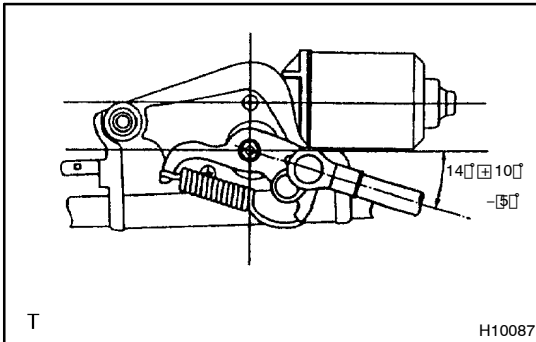

- (c) Install the crank arm assembly with the washer and nut as shown in the illustration.

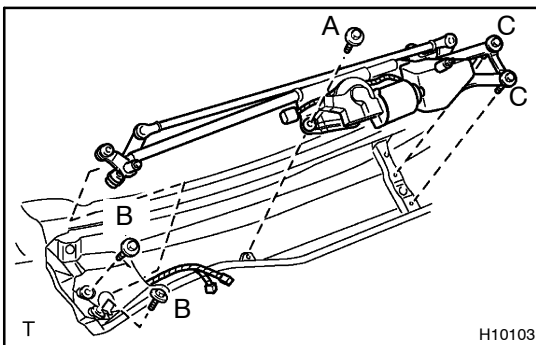

3. INSTALL WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor and link assembly.
- (1) Place the wiper motor and link assembly on the driver's seat side from the hole in the cowl brace.
 - (2) Pull out the driver's seat side shaft of the wiper motor and link assembly from the hole in the cowl brace.
 - (3) Temporarily tighten either of bolts B and C each.
 - (4) Tighten the reference bolt A.
- Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**
- (5) Tighten bolts B and C completely.

Torque:

Bolt B: 5.0 N·m (51 kgf·cm, 44 in·lbf)

Bolt C: 7.0 N·m (71 kgf·cm, 62 in·lbf)

- (b) Connect the connector.


4. INSTALL WIPER MOTOR COVER

5. INSTALL COWL TOP VENTILATOR LOUVERS

6. INSTALL HOOD TO COWL TOP SEAL

7. INSTALL WIPER ARMS

- (a) Operate the wipers once and turn the wiper switch OFF.
- (b) Install the wiper arms.

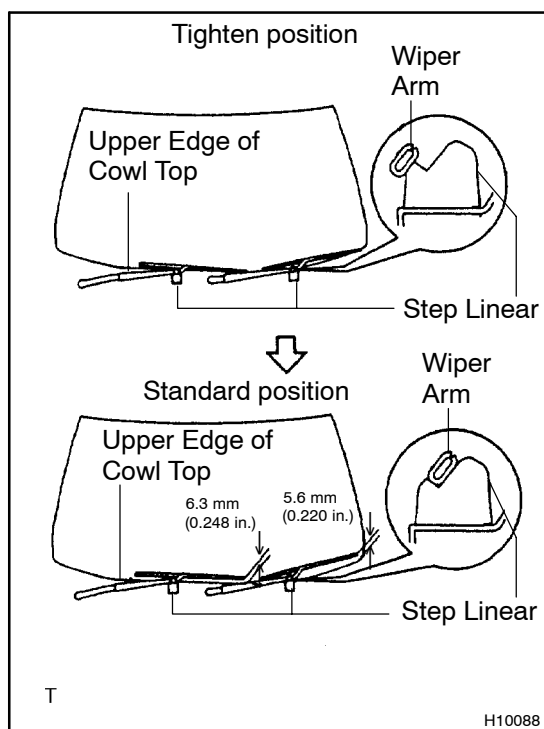

- (c) Move the wiper arms from the step linears, slightly slide downwards to align the tip of blade with the upper edge of cowl top, and tighten nuts.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

NOTICE:

Make sure the wiper arms are installed correctly by checking the identification marks.

- (d) Set the wiper arms to the step linear at the standard position. Check that the tip of the blade is positioned as shown in the illustration.