BO28R-01

REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO-18).