

INSTALLATION

1. INSTALL REAR HEIGHT CONTROL SENSOR

Install the rear height control sensor with the 2 bolts.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

2. CONNECT HEIGHT CONTROL SENSOR LINK

(a) Align the matchmarks on the height control sensor link and bracket.

(b) Install the nut and connect the sensor link.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

3. CONNECT CONNECTOR

4. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

5. INSTALL LUGGAGE COMPARTMENT TRIM FRONT COVER AND FLOOR MAT

6. CHECK VEHICLE HEIGHT (See page SA-5)