

## INSPECTION

### INSPECT WATER PUMP

(a) Visually check the air hole and drain hose for coolant leakage.

If leakage is found, replace the water pump.

(b) Turn the pulley seat, and check that the water pump bearing is not rough or noisy.

If necessary, replace the water pump.