


Position of Parts in Rear Seat

[RHD]

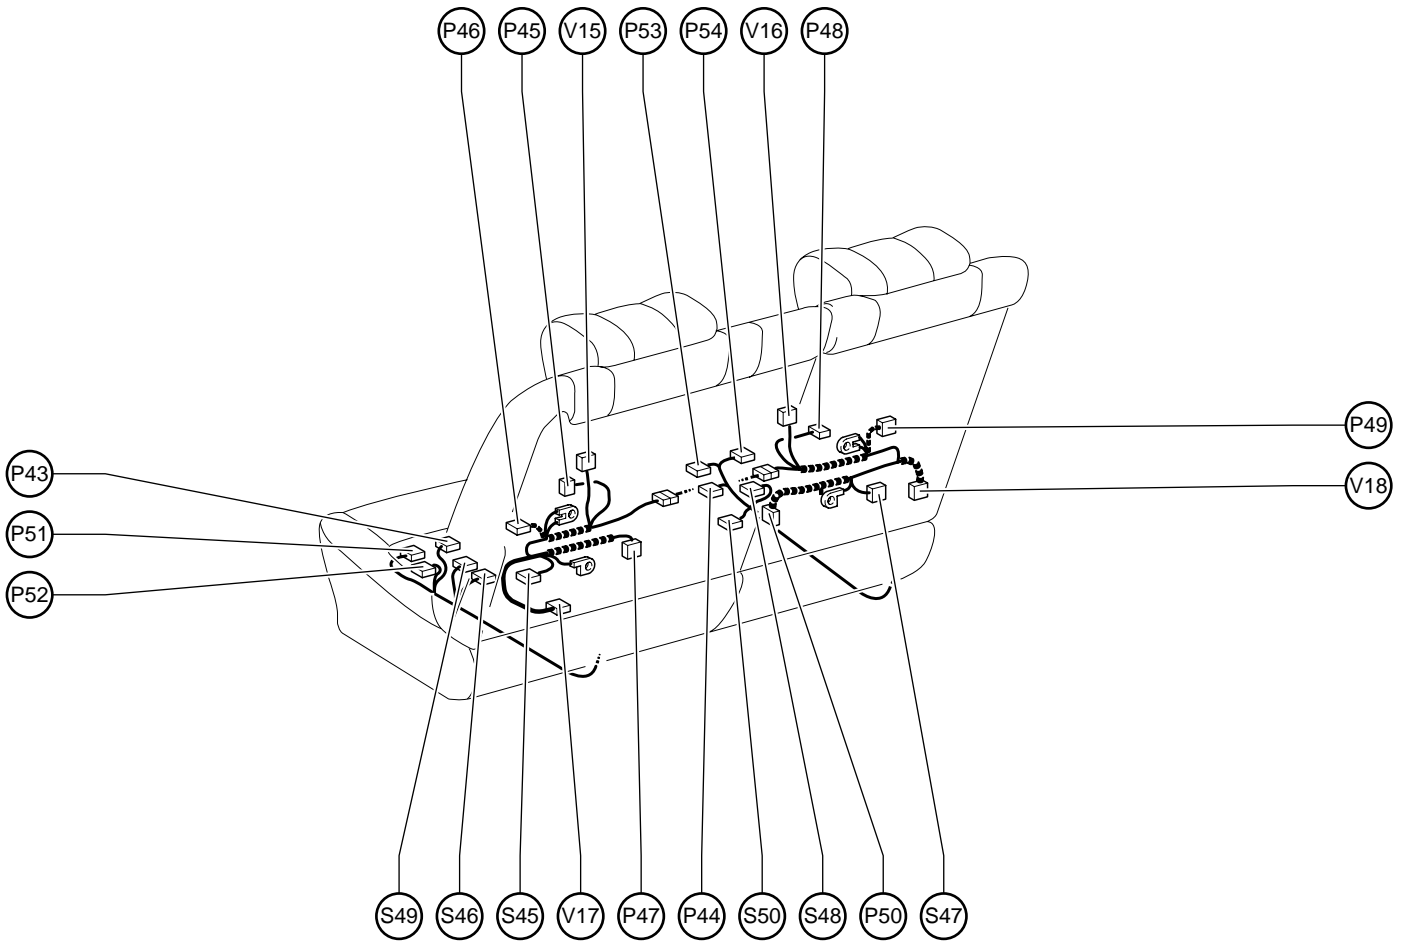

- | | |
|---|---|
| P43 Power Seat Limit SW Rear LH | P53 Power Seat Motor and Position Sensor
(Rear Seat RH Slide Control) |
| P44 Power Seat Limit SW Rear RH | P54 Power Seat Motor and Position Sensor
(Rear Seat RH Vertical Control) |
| P45 Power Seat Motor
(Rear Seat LH Head Rest Top and Bottom Control) | S45 Seat Heater Rear LH (Seat Back) |
| P46 Power Seat Motor
(Rear Seat LH Head Rest Turning Control) | S46 Seat Heater Rear LH (Seat Cushion) |
| P47 Power Seat Motor
(Rear Seat LH Lumbar Support Control) | S47 Seat Heater Rear RH (Seat Back) |
| P48 Power Seat Motor
(Rear Seat RH Head Rest Top and Bottom Control) | S48 Seat Heater Rear RH (Seat Cushion) |
| P49 Power Seat Motor
(Rear Seat RH Head Rest Turning Control) | S49 Step Light Rear LH |
| P50 Power Seat Motor
(Rear Seat RH Lumbar Support Control) | S50 Step Light Rear RH |
| P51 Power Seat Motor and Position Sensor
(Rear Seat LH Slide Control) | V15 Vibration Seat ECU LH |
| P52 Power Seat Motor and Position Sensor
(Rear Seat LH Vertical Control) | V16 Vibration Seat ECU RH |
| | V17 Vibrator LH |
| | V18 Vibrator RH |