
 





 
 


 



PREPARATION

SST (SPECIAL SERVICE TOOLS)






 
 
AT006-02

AT

	<p>09032-00100 Oil Pan Seal Cutter</p>	
	<p>09060-20100 Deeper Socket Wrench 30 mm</p>	
	<p>09240-00020 Wire Gauge Set</p>	
	<p>09308-00010 Oil Seal Puller</p>	
	<p>09309-37010 Transmission Bearing Replacer</p>	
	<p>09240-00020 Wire Gauge Set</p>	
	<p>09350-30020 TOYOTA Automatic Transmission Tool Set</p>	
	<p>(09350-06120) No.2 Measure Terminal</p>	
	<p>(09350-07020) Oil Pump Puller</p>	
	<p>(09350-07030) No.1 Piston Spring Compressor</p>	
	<p>(09350-07040) No.2 Piston Spring Compressor</p>	
	<p>(09350-07050) No.3 Piston Spring Compressor</p>	
	<p>(09350-07060) No.1 Snap Ring Expander</p>	



AUTOMATIC TRANSMISSION — PREPARATION

AT-11

	(09350-07070) No.2 Snap Ring Expander	
	(09350-07080) Brake Reaction Sleeve Puller	
	(09350-07090) Brake No.1 Piston Puller	
	(09350-07110) Oil Seal Replacer	
	(09351-32140) Oil Seal Replacer	
	09517-36010 Rear Axle Shaft Oil Seal Replacer	
	09992-00094 Automatic Transmission Oil Pressure Gauge Set	

RECOMMENDED TOOLS

AT007-02

	09031-00030 Pin Punch	
	09082-00015 TOYOTA Electrical Tester	

EQUIPMENT

AT008-02

Feeler gauge	Check major clearance.
Vernier calipers	Check length of second coast brake piston rod.
Dial indicator or dial indicator with magnetic base	Check piston stroke and play of the output shaft.
Dial indicator	Check inside diameter of major bushing.
Straight edge	Check side clearance of oil pump.
Torque wrench	