

6. Intensity of meter and pointer illuminations does not change by adjusting the light control rheostat.

INSPECTION PROCEDURE

1 Check of light control rheostat.

CHECK:

Does light control rheostat function normally? (See page BE-61)

No

Faulty light control rheostat.

Yes

2 Disconnect light control rheostat side connector.

3 Check of wiring harness.

CHECK:

Is it continuity between light control rheostat vehicle side connector 3 (RV) and combination meter A19 (ILL-) terminals?

No

Faulty wiring harness.

Yes

Faulty meter ECU.