


Diagnosis Circuit

CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.

WIRING DIAGRAM

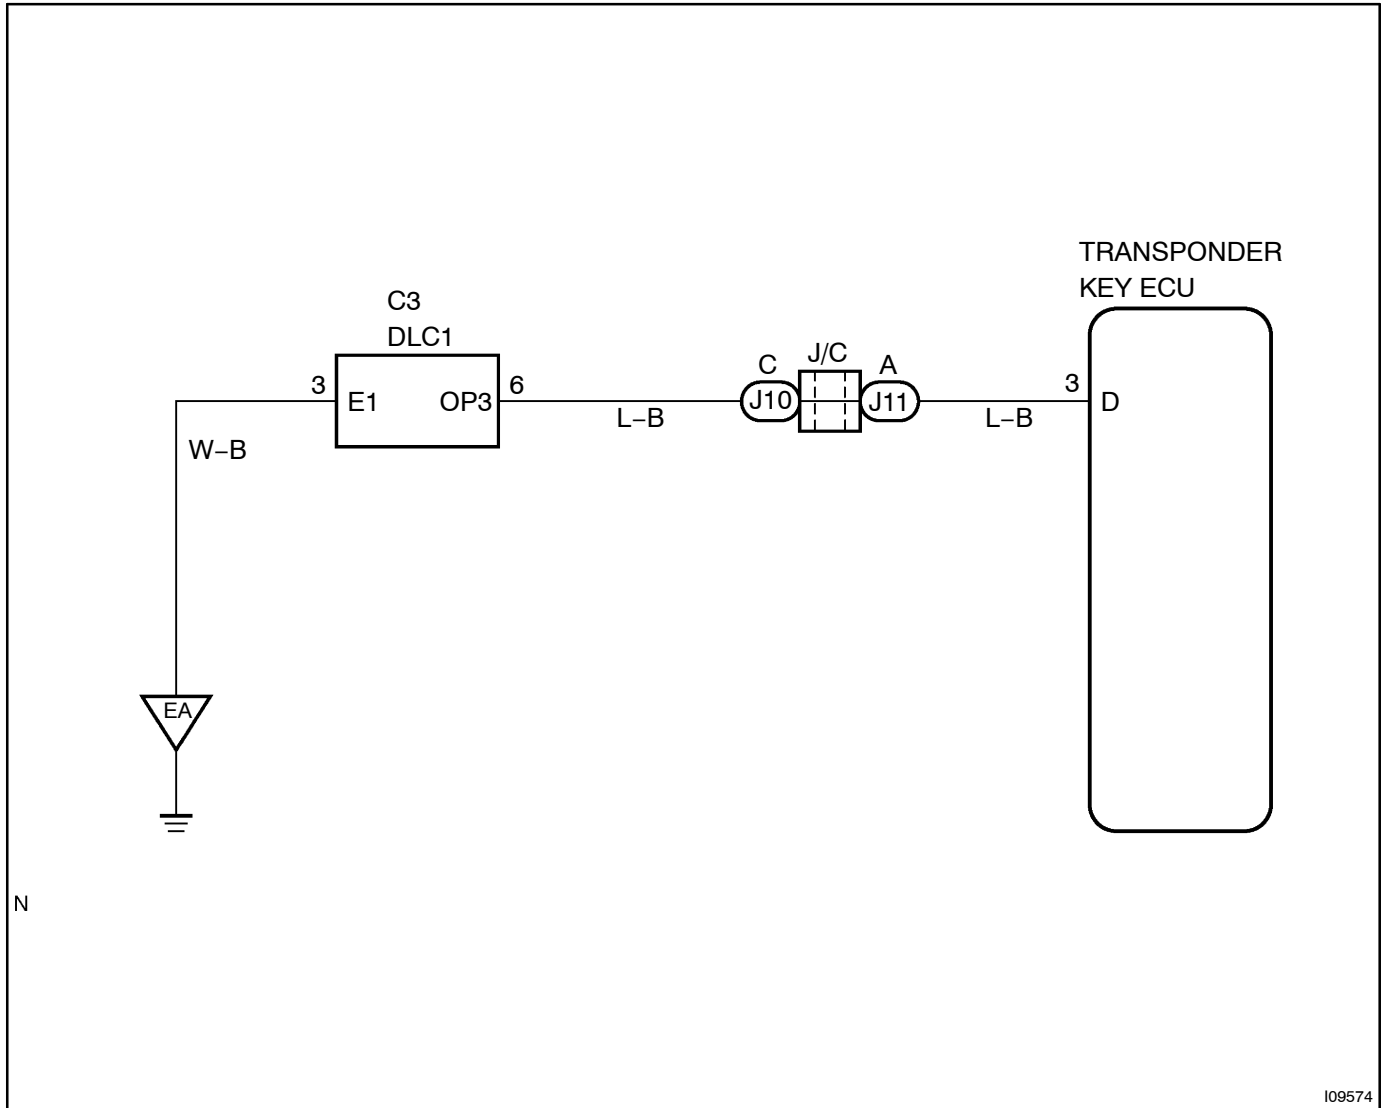


N

109574

INSPECTION PROCEDURE

1 Check voltage between terminals Tc and E₁ of DLC1.

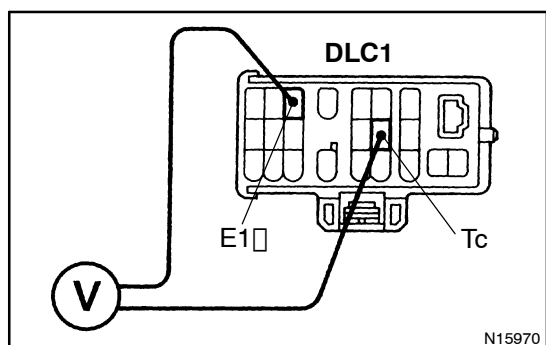**CHECK:**

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals Tc and E₁ of DLC2.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-435).

NG

2 Check harness and connector between transponder key ECU and DLC1, DLC1 and body ground (See page IN-30).

NG

Repair or replace harness or connector.

OK

Check and replace transponder key ECU (See page IN-30).