


All door courtesy signal circuit

CIRCUIT DESCRIPTION

The immobilizer ECU receives the signal from the courtesy light switch and sends that signal to the Body ECU.

WIRING DIAGRAM

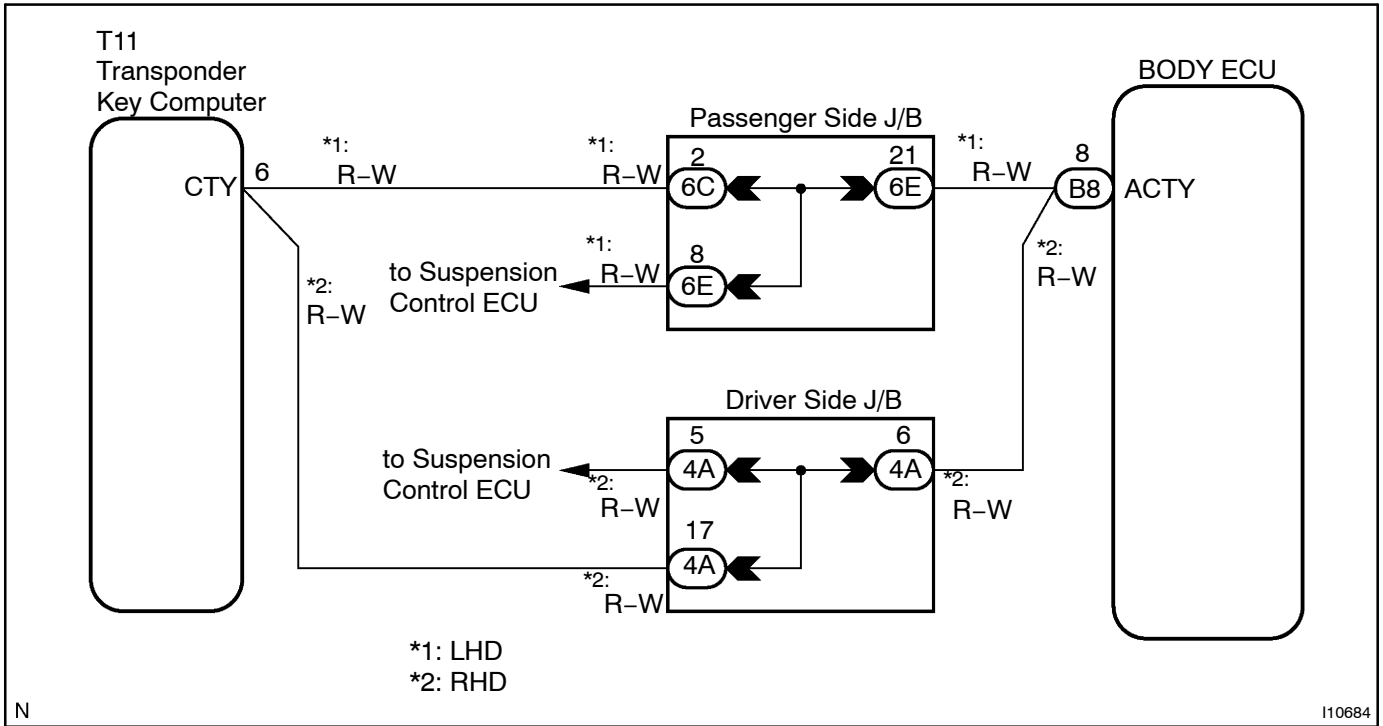

INSPECTION PROCEDURE

1 Check engine immobilizer system (See page DI-428).

NG

Replace the theft deterrent horn.

OK

2 Check wireharness and connector between engine immobilizer ECU and Body ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-488).