

### 3. The entire meter does not operate (partial normal operations).

#### INSPECTION PROCEDURE

1 Check of meter operation.

##### CHECK:

Do all indicators operate, except ABS indicator, upon ignition switch ON?

Yes

Faulty MPX-B fuse.  
Faulty wiring harness.

No

2 Check of meter operation.

##### CHECK:

Do speedometer, water temperature gauge, fuel meter and multi-information display not operate upon ignition switch ON, while meter illumination operates normally?

Yes

Faulty METER fuse.  
Faulty wiring harness.

No

3 Earth check.

##### CHECK:

Is there continuity between body side connector A23 (power earth) and body earth after disconnecting meter connector?

Yes

Faulty body earth.  
Faulty wiring harness.

No

Connection of meter connector.  
Meter ECU.